

xtramus

**MCS-2160
Media Converter
User's Manual**



Foreword

Copyright

Copyright © 2019 Xtramus Technologies, all rights reserved. The information contained in this document is the property of Xtramus Technologies. No part of this publication shall be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Xtramus Technologies.

Disclaimer

The information contained in this document is subject to change without notice and does not represent a commitment on the part of Xtramus Technologies. The information in this document is believed to be accurate and reliable. However, Xtramus Technologies assumes no responsibility or liability for any errors or inaccuracies that may appear in the document.

Trademarks

MCS-2160 is a trademark or registered trademark of Xtramus Technologies. All other trademarks and registered trademarks are the property of their respective owners.

Warranty

Xtramus Technologies warrants for the hardware provided along with this document under proper usage and conditions in normal environment; any improper operation or in irregular environment may possibly cause this product NOT function well. For detailed terms, please contact your local dealer.

Contact Information

Xtramus Technologies

E-mail: sales@xtramus.com

Website: www.xtramus.com

Tel: +886-2-8227-6611

Fax: +886-2-8227-6622



Revision History

Date	Version	History
2011/10/11	1.0	First draft version
2011/11/04	1.1	<ol style="list-style-type: none"> 1. Modifying XC-M667 figure. (Page 12) 2. Added new figure for MCS-FANT-05. (Page 24) 3. Modifying new figure for Management interface. (Page 41-43) 4. Added new subject: "Port A/B SDFR Setting" and "Port A/B Capture View". (Page 49 and 50)
2011/12/02	1.2	<ol style="list-style-type: none"> 1. Updating MCS-2160 interface figure. (Page 36) 2. Updating System Information interface's figure by adding Syslog Info. (Page 37) 3. Updating System Information interface's figure by adding Syslog Info and descriptions. (Page 38) 4. Added Syslog Settings function and 3CDaemon software's functions descriptions. (Page 40~42) 5. Updating the Chassis Management interface and descriptions. (Page 44) 6. Modifying the figure of Chassis Management. (Page 46 and 47) 7. Added Fan Tray interface (M) figure and description. Added note for auto-refresh of Fan Tray Temperature. (Page 45) 8. Updating Card Information interface figure, description and note of auto-refresh for Temperature, Port Wavelength and Factory. (Page 48) 9. Added Port A/B DDMI figure and descriptions. (Page 49) 10. Added note for auto-refresh of USC counter of the web interface. (page 53)
2012/01/10	1.3	<ol style="list-style-type: none"> 1. Updating the System information interface by adding the Fan Tray Information. (Page 39) 2. Updating the Chassis Management interface. (Page 45-47) 3. Updating Port A/B DDMI figure and description by changing the unit mW to dBm. (Page 49) 4. Added Console function. (Page 56-60) 5. Added Telnet access function. (Page 60-62) 6. Page 7, updating Main Applications
2012/03/28	1.4	<ol style="list-style-type: none"> 1. Updating System information interface for License Information field. (Page 35-37) 2. Adding status capture for 3Cdaemon. (Page 40) 3. Renewing the description of Management functions and interfaces by adding SNMP v1/2/3, Time, Date, Alarm mail and cascade display. (Page 39-48, 50) 4. Adding SNMP v1/2/3, Time, Date, Alarm mail command to Hyper Terminal. (Page 62) 5. Adding cascade screenshot and description on hyper terminal. (Page 63) 6. Adding SNMP v1/2/3, Time, Date, Alarm mail command to Hyper Terminal. (Page 67) 7. Adding cascade screenshot and description on telnet. (Page 68)
2012/04/23	1.5	<ol style="list-style-type: none"> 1. Adding figures and description for FPGA/Firmware updating progress bar. (Page 56)



Date	Version	History
2012/04/23	1.5	<ol style="list-style-type: none"> 2. Adding figures and description for MCM-W series Management's Counter. (Page 49) 3. Adding description about Mail Content on hyper terminal. (Page 64) 4. Adding description about Mail Content on Telnet. (Page 69)
2012/05/10	1.6	<ol style="list-style-type: none"> 1. Updating new figure and description for Language option. (Page 37) 2. Updating new figure and description for License information. (Page 38) 3. Adding new function (safety and configuration settings) description for Management. (Page 40) 4. Adding Download MIB File function for SNMP settings. (Page 45) 5. Adding Safety and Configuration settings description and figures. (Page 48) 6. Updating Media Converter Management function description and figures. (Page 49-50) 7. Updating Chassis Management interface figure. (Page 51) 8. Updating Counter' chassis id and slot id description and figure. (Page 56) 9. Adding Language option's figure and description. (Page 61) 10. Updating MCS-2160 system update description for Hyper Terminal and Telnet. (Page 64 and 69) 11. Updating XC module cards update description for Hyper Terminal and Telnet. (Page 66 and 71)
2012/05/28	1.7	<ol style="list-style-type: none"> 1. Adding description of Chinese Traditional option on the Language function. (Page 37) 2. Adding description and figure of Chinese Traditional option on the Language function. (Page 61) 3. Updating new figure of USC Counter for displaying the module card model. (Page 56) 4. Updating the description and figure of Mail Configuration for Switch ON/OFF → Enable. (Page 47) 5. Updating the description and figure of Safety Configuration for Switch ON/OFF → Enable. (Page 48) 6. Adding description about Web Management will auto log out when accessing MCS-2160 via Telnet. (Page 69) 7. Adding description about Web Management or Telnet will auto log out when accessing MCS-2160 via Hyper Terminal. (Page 62) 8. Adding description and figure showing the progress bar during the upgrading of MCS-2160 or XC module via console and Tftpd32 software. (Page 67)



Date	Version	History
2012/06/05	1.8	<ol style="list-style-type: none">1. Adding Link Loss Forwarding (LLF) function. (Page 9)2. Adding Japanese and Korean Language description. (Page 38)3. Adding note describing XC-8SXX module cards don't support Port Configuration function. (Page 54)4. Adding description and figure about the XC-7S81 module card supporting Port Configuration function. (Page 61-62)5. Adding description and figure for Japanese and Korean language. (Page 64)
2012/07/19	1.9	<ol style="list-style-type: none">1. Add information about auto detecting a new user (MCM) of the same Network Segment. (Page 50)2. Updating new figure for Chassis Management. (Page 52)3. Adding description for Chassis Overview. (Page 63)4. Adding description about Syslog (Logip) and Safety functions for hyper terminal and telnet. (Page 68 and 74)
2012/09/24	1.9.1	<ol style="list-style-type: none">1. Upgrading system firmware MGM_RTC_v1.1b003 description note in Web user interface, Hyper Terminal and Telnet. (Page 64, 68, 74)2. Updating Media Converter Management figure and description.(Page 50-51)3. Adding description about showing detail information of MCS-FANT on Hyper Terminal and Telnet. (Page 68, 74)
2013/07/14	1.9.2	<ol style="list-style-type: none">1. Remove descriptions regarding to 100W power module.
2019/05/16	1.9.3	<ol style="list-style-type: none">1. Change header and footer pictures.
2019/12/06	1.9.4	<ol style="list-style-type: none">1. Add XC-8S62 module card.



Table of Contents

Foreword.....	2
Revision History	3
1. MCS-2160 Overview	8
1.1. General Descriptions of MCS-2160	8
1.2. Features, Key Advantages, and Main Applications of MCS-2160.....	9
1.3. MCS-2160 Functions Overview.....	10
1.3.1. MCS-2160 Outer Case.....	10
1.3.2. MCS-2160 Front Part.....	11
1.3.3. Module Cards.....	12
1.3.3.1. System Module Cards.....	13
A. System Module Card – XC-SFAN	13
B. System Module Card – XM-M667.....	14
C. System Module Card – XC-CASC.....	15
1.3.3.2. Media Converter Module Cards.....	16
A. Media Converter Module Card – XC-7S81	16
B. Media Converter Module Card – XC-8S22	17
C. Media Converter Module Card – XC-8S23	18
D. Media Converter Module Card – XC-8S33	19
E. Media Converter Module Card – XC-8S82.....	20
F. Media Converter Module Card – XC-8S83	21
G. Media Converter Module Card – XC-8S62.....	22
1.3.4. MCS-2160 Rear End.....	23
A. XC-RFAN Fan Module	24
B. XCP-DC-300	24
C. XCP-AC-300	25
1.3.5. Optional Fan Tray – MCS-FANT-05	26
2. MCS-2160 Installation	28
2.1. Choices of UTP Cable and Optical fiber.....	28
2.1.1. 10GBASE-T (Copper Wire)	28
2.1.2. 10GBASE-R (Optical Fiber)	29
2.2. Hardware Installation.....	31
2.2.1. Bracket installation.....	31
2.2.2. Module Cards Installation	33
2.2.3. Power Module	34
2.2.3.1. XCP-DC-300.....	34
2.2.3.2. XCP-AC-300.....	35
2.2.4. Fan Module.....	35
2.2.4.1. XC-SFAN.....	35
2.2.4.2. XC-RFAN.....	36
2.2.4.3. MCS-FANT-05	36
3. MCS-2160 Management	37
3.1. Managing MCS-2160 with Management Webpage.....	37
3.1.1. Accessing MCS-2160 Management Webpage.....	38
3.1.2. MCS-2160 Management Webpage – Overview.....	39
3.1.3. MCS-2160 Management Webpage – System.....	40
3.1.3.1. System Information.....	40
3.1.3.2. Fan Tray Information.....	41
3.1.4. MCS-2160 Management Webpage – Management.....	42
A. IP Configuration	42
B. Syslog Settings	43
C. User Settings	46
D. SNMP Settings.....	47
E. Time Settings.....	48
F. Mail Settings.....	49



G. Safety Settings	50
H. Configuration Settings.....	50
I. Media Converter Management	51
J. Chassis Management	53
a. Information.....	56
b. Port A/B DDMI	57
c. Counter.....	58
d. Upgrade.....	59
e. Power Control	60
f. Port A/B USC Setting.....	60
g. Port A/B Universal Stream Counter	61
h. Link Loss Forwarding (LLF).....	61
i. Module Card Options_XC-7S81	62
K. Chassis Overview	64
3.1.5. MCS-2160 Management Webpage – Maintenance	65
A. Save Changes	65
B. Update F/W (Firmware)	65
C. System Reboot	66
D. Factory Defaults	66
3.1.6. MCS-2160 Management Webpage – Language.....	66
3.2.1. HyperTerminal Settings for MCS-2160	68
3.2.2. MCS-2160 HyperTerminal Commands.....	68
A. MCS-2160 HyperTerminal Command – system.....	69
B. MCS-2160 HyperTerminal Command – ip	73
C. MCS-2160 HyperTerminal Command – cls	73
D. MCS-2160 HyperTerminal Command – logout	73
3.3 Managing MCS-2160 with Telnet.....	74
3.3.1. Telnet Settings for MCS-2160.....	74
3.2.2. MCS-2160 Telnet Commands	74
A. MCS-2160 Telnet Command – system	75
B. MCS-2160 Telnet Command – ip	78
C. MCS-2160 Telnet Command – cls.....	78
D. MCS-2160 Telnet Command – logout.....	78
4. MCS-2160 General Specifications	79



1. MCS-2160 Overview

1.1. General Descriptions of MCS-2160

MCS-2160 media converter chassis is a complete and versatile solution for the applications such as FTTx, CWDM, and carrier Ethernet. By the diversified speeds of 1,000Mbps and 10G, Xtramus provides different XC series module cards for



different applications and can be applied according to your ideal network topology.

Combined with XC series module cards, MCS-2160 media converter chassis provide various interfaces such as UTP, SFP, SFP+ and XFP. All these interfaces are developed to support the protocols such as 100Base-Tx, 100Base-Fx, 1000Base-T, 1000Base-X, 10GBase-T, 10GBase-LR and 10GBase-SR, thus making your network more complete and solid.

Also, XC series module cards support MIB Counter Report including counters such as Packet, Byte, Broadcast packet, Pause Frame, Length: 64 Bytes, Length: 65~127 Bytes, Length: 128~255 Bytes, Length: 256~511 Bytes, Length: 512~1023 Bytes, Length: 1024~1518 Bytes, Unicast packet, Multicast packet, CRC Error, IP Checksum Error, Under size packet, and Over size packet.

All XC series module cards are equipped with real-time LEDs which display the status of each port, thus allowing users to view network status easily.

MCS-2160 media converter chassis provides an easy-to-access Management Webpage, allowing users to view system status, counters, upgrading firmware/FPGA and network statistics. Moreover, XC-CASC module card allows you to cascade multiple MCS-2160 chassis for managing these chassis at the same time.

With various interfaces, MCS-2160 provides different conversions between fibers and copper wires in 10G Ethernet.



1.2. Features, Key Advantages, and Main Applications of MCS-2160

Features

- Diversified interfaces including SFP, SFP+, UTP and XFP
- Supports 3R (Re-generation, Re-timing, Re-shaping) Performance
- Supports Jumbo Frame
- Supports D/D (Digital Detection) functioned optical transceivers and overload protection
- Supports easy-to-use Management Webpage that allows users to view system status, counters, upgrading firmware/FPGA and network statistics
- Multiple MCS-2160 chassis can be cascaded for system management
- Replaceable power modules for AC & DC power
- Supports Link Loss Forwarding
- Optional Fan Tray (MCS-FANT-05) which can be placed under MCS-2160 chassis for ventilation

Key Advantages

- Fast connection with multi-function
- Provide reliable long-distance connection
- Port supported: SFP, SFP+, UTP and XFP


Main Applications

- Media converter for network backbone
- Connection between fiber to copper or fiber to fiber 10G Ethernet equipment
- Can be applied in Telecommunication room, R&D laboratory, Data center, and etc
- Providing additional network management options
- Can be applied in Telecommunication room, R&D laboratory, Data center, etc



1.3. MCS-2160 Functions Overview

1.3.1. MCS-2160 Outer Case

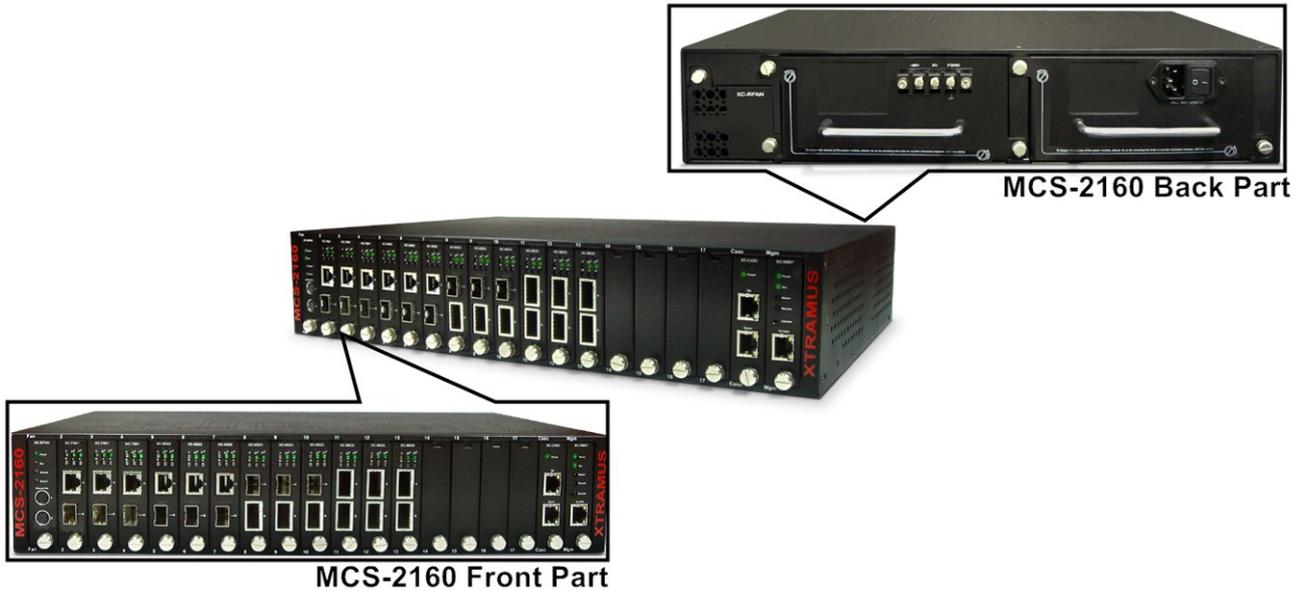


MCS-2160's outer case consists two parts: **Front Part** and **Back Part**. The figure above shows the outer case of MCS-2160. Outer cases of other MCS-2160 are quite the same and can be related.

MCS-2160 Outer Case Overview	
Front Part	MCS-2160 has 16 slots for installation of module cards, where each module card provides media converting platforms for different types of media. Besides, the Front Part includes 3 slots with Fan, CASC and Management module card installed. Please see “ 1.3.2. MCS-2160 Front Part ” for more detailed information.
Back Part	MCS-2160's back part includes 3 different slots for installation of a DC module, AC module and a Fan module. Please see “ 1.3.3. MCS-2160 Back Part ” for more detailed information.



1.3.2. MCS-2160 Front Part

As mentioned in “1.3.1. MCS-2160 Outer Case”, MCS-2160 has 16 slots for installation of media converter module cards and 3 slots comprising a Fan, CASC and Management module card installed. Please see the sections down below for more detailed information/specification for MCS-2160 and the module cards.

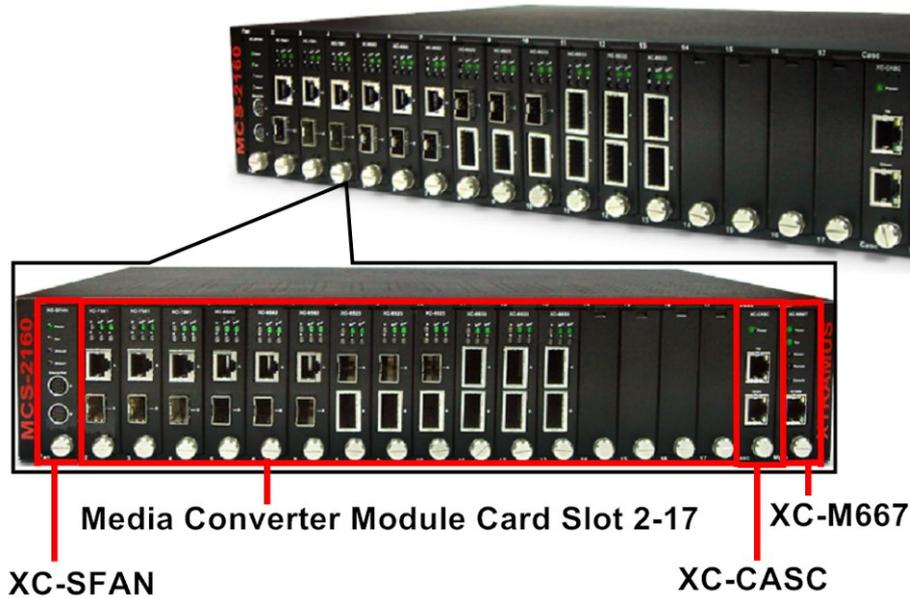

MCS-2160 Front Part	
XC-SFAN	It is a fan module card pre-installed in front part of MCS-2160 chassis.
XC-M667	It is a module card pre-installed in MCS-2160 chassis with 1 Management port for accessing the Management Webpage and 1 Console port for accessing the HyperTerminal settings.
XC-CASC	It is a module card pre-installed in MCS-2160 with 2 ports where each port can connect another MCS-2160 providing simultaneous access to the Management Webpage.
Media Converter Module Card Slots 2-17	Media converter module cards can be inserted in each of slot 2-17.

*Note: XC-SFAN, XC-M667 and XC-CASC do not support hot swap, please, do not withdraw the XC-SFAN, XC-M667 and XC-CASC module card when the system is power on.

*Note2: Do not change XC-M667, XC-CASC and XC-SFAN inserting slot.



1.3.3. Module Cards

MCS-2160's module cards can be divided into two categories: **System Module Cards** and **Media Converter Module Cards**.

Module Card Type	Module Card	Description
System Module Cards	<ul style="list-style-type: none">• XC-SFAN• XC-M667• XC-CASC	<p>These module cards can provide ventilation for the MCS-2160 chassis, allowing users to view counters/perform system maintenance, or cascade multiple MCS-2160 chassis.</p> <p>Please note that System Module Cards do not support hot-swap, and must be installed to their designated slots on MCS-2160 chassis.</p>
Media Converter Module Cards	<ul style="list-style-type: none">• XC-7S81• XC-8S22• XC-8S23• XC-8S82• XC-8S33• XC-8S83	<p>Module cards for media converting. These Media Converter Cards can be installed in MCS-2160 Slot 2~17 and support hot-swap.</p>

Please see the sections down below for more detail information regarding to MCS-2160 Module Cards.



1.3.3.1. System Module Cards

A. System Module Card – XC-SFAN



The **XC-SFAN** comes with your MCS-2160 chassis, and shall be installed on the **Fan** slot located on the far left side of MCS-2160 chassis. This module card provides ventilation for the MCS-2160 chassis.

Also, XC-SFAN's **CTRL + PWR** and **PWR** ports are designed to provide power source and gather information for MCS-FANT fan tray. When connecting XC-SFAN to MCS-FANT fan tray, please do so by connect to MCS-SFAN's **CTRL + PWR** port to MCS-FANT's **CTRL + PWR** port, and XC-SFAN's **PWR** port to MCS-FANT's **PWR** port.

If you cross connect between **CTRL + PWR** port and **PWR** port of XC-SFAN and MCS-FANT, MCS-2160 will be seriously damaged.

Interface Ports		
CTRL + PWR	8-Pin Mini-Din Port which can provide power for MCS-FANT and system information regarding to MCS-FANT	
PWR	8-Pin Mini-Din Port which can provide power for MCS-FANT	
LED		
Power	Green ON	XC-SFAN is power on
	Green OFF	XC-SFAN is power off
Sys	Green ON	XC-SFAN is powering up properly
	Green OFF	XC-SFAN is power off
Status 0	User-defined LED	
Status 1	User-defined LED	
*Note: XC-SFAN does not support hot-swap. Please do not draw the XC-SFAN module card from MCS-2160 chassis when the system is power on.		



B. System Module Card – XM-M667



The **XC-M667** comes with your MCS-2160 chassis, and shall be installed on the **Mgm** slot located on the far right side of MCS-2160 chassis. This module card allows you to manage MCS-2160 chassis via management webpage.

To access the Management Web Page of MCS-2160 for configuration on your browser, please connect a RJ45 cable between the Management port of MCS-2160 and your PC.

To configure MCS-2160 on your PC (Telnet or Hyper Terminal), please connect a 2.5mm Phone Jack to RS232 between your PC and Console Port of MCS-2160, where the 2.5mm Phone Jack end must be plug in the Console Port of MCS-2160 and the RS232 end must be connect to your PC.

Interface Ports		
Console Port	One 2.5mm Phone Jack Port for managing MCS-2160 via HyperTerminal	
Management Port	One 10/100M RJ45 Port for managing MCS-2160 via management webpage	
LED		
Power	Green ON	XC-M667 is power on
	Green OFF	XC-M667 is power off
Sys	Yellow ON	XC-M667 is booting and preparing for test
	Green ON (Blinking)	XC-M667 is booting properly and is ready for test
	Green OFF	XC-M667 is power off
Master	User defined LED	
Remote	User defined LED	

***Note:** XC-M667 does not support hot-swap. Please do not draw the XC-M667 module card from MCS-2160 chassis when the system is power on.



C. System Module Card – XC-CASC



The **XC-CASC** comes with your MCS-2160 chassis, and shall be installed on the **Casc** slot located on the right side of MCS-2160 chassis (next to **XC-M667** module card). This module card allows you to cascade multiple MCS-2160 chassis.

On a rack mount structure with numerous MCS-2160 installed, you can inter-connect a MCS-2160 with another MCS-2160 situated above or below by using a RJ45 cable connecting their Port (Up) or Port (Down). By doing the inter-connection, you can access the Management Web Page for all the inter-connected MCS-2160 by only linking one of their XC-M667 Management Port on your PC.

Interface Ports		
Port (Up)	One 10/100M RJ45 Port for cascading another MCS-2160 chassis	
Port (Down)	One 10/100M RJ45 Port for cascading another MCS-2160 chassis	
LED		
Power	Green ON	MCS-2160 is power on
	Green OFF	MCS-2160 is power off

***Note: XC-CASC does not support hot-swap. Please do not draw the XC-CASC module card from MCS-2160 chassis when the system is power on.**



1.3.3.2. Media Converter Module Cards

A. Media Converter Module Card – XC-7S81



XC-7S81 Front Panel Specification		
Interface	Port A	RJ45
	Port B	SFP
Data Transfer Rate	1000 Mbps	
Ethernet Mode	1000Base-T 1000Base-X	
LED Status		
Power	Green ON	XC-7S81 is power on.
	Green OFF	XC-7S81 is power off.
SYS	Green ON	XC-7S81 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-7S81.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■	User-defined LED	
▲	User-defined LED	
Note: All LEDs will be off when upgrading FPGA/Firmware		



B. Media Converter Module Card – XC-8S22



XC-8S22 Front Panel Specification		
Interface	Port A	SFP+
	Port B	SFP+
Data Transfer Rate	10Gbps	
Ethernet Mode	10GBase-LR 10GBase-SR	
LED Status		
Power	Green ON	XC-8S22 is power on.
	Green OFF	XC-8S22 is power off.
SYS	Green ON	XC-8S22 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S22.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■	User-defined LED	
▲	User-defined LED	
Note: All LEDS will be off when upgrading FPGA/Firmware		



C. Media Converter Module Card – XC-8S23



XC-8S23 Front Panel Specification		
Interface	Port A	SFP+
	Port B	XFP
Data Transfer Rate	10Gbps	
Ethernet Mode	10GBase-LR 10GBase-SR	
LED Status		
Power	Green ON	XC-8S23 is power on.
	Green OFF	XC-8S23 is power off.
SYS	Green ON	XC-8S23 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S23.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■	User-defined LED	
▲	User-defined LED	
Note: All LEDs will be off when upgrading FPGA/Firmware		



D. Media Converter Module Card – XC-8S33



XC-8S33 Front Panel Specification		
Interface	Port A	XFP
	Port B	XFP
Data Transfer Rate	10Gbps	
Ethernet Mode	10GBase-LR	
	10GBase-SR	
LED Status		
Power	Green ON	XC-8S33 is power on.
	Green OFF	XC-8S33 is power off.
SYS	Green ON	XC-8S33 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S33.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■	User-defined LED	
▲	User-defined LED	
Note: All LEDs will be off when upgrading FPGA/Firmware		



E. Media Converter Module Card – XC-8S82



XC-8S82 Front Panel Specification		
Interface	Port A	RJ45
	Port B	SFP+
Data Transfer Rate	10Gbps	
Ethernet Mode	10GBase-T 10GBase-LR 10GBase-SR	
LED Status		
Power	Green ON	XC-8S82 is power on.
	Green OFF	XC-8S82 is power off.
SYS	Green ON	XC-8S82 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S82.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■	User-defined LED	
▲	User-defined LED	
Note: All LEDs will be off when upgrading FPGA/Firmware		



F. Media Converter Module Card – XC-8S83



XC-8S83 Front Panel Specification		
Interface	Port A	RJ45
	Port B	XFP
Data Transfer Rate		10Gbps
Ethernet Mode		10GBase-LR 10GBase-SR 10G-Base-T
LED Status		
Power	Green ON	XC-8S33 is power on.
	Green OFF	XC-8S33 is power off.
SYS	Green ON	XC-8S33 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S33.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■		User-defined LED
▲		User-defined LED
Note: All LEDs will be off when upgrading FPGA/Firmware		



G. Media Converter Module Card – XC-8S62




XC-8S62 Front Panel Specification		
Interface	Port A	CX4
	Port B	SFP+
Data Transfer Rate		10Gbps
Ethernet Mode		10G-Base-CX4 10GBase-LR 10GBase-SR
LED Status		
Power	Green ON	XC-8S62 is power on.
	Green OFF	XC-8S62 is power off.
SYS	Green ON	XC-8S62 is booting properly and is ready for tests.
	Yellow ON	Error occurred when booting XC-8S62.
A/B	Green ON	Port A/B is connected.
	Green Blinking	Port A/B is transmitting/receiving data.
■		User-defined LED
▲		User-defined LED
Note: All LEDs will be off when upgrading FPGA/Firmware		



1.3.4. MCS-2160 Rear End

As mentioned in “1.3.1. MCS-2160 Outer Case”, MCS-2160’s rear end includes 3 different slots for installation of a DC module, AC module and a Fan module. Please see the sections down below for more detailed information/specification for MCS-2160 and modules.

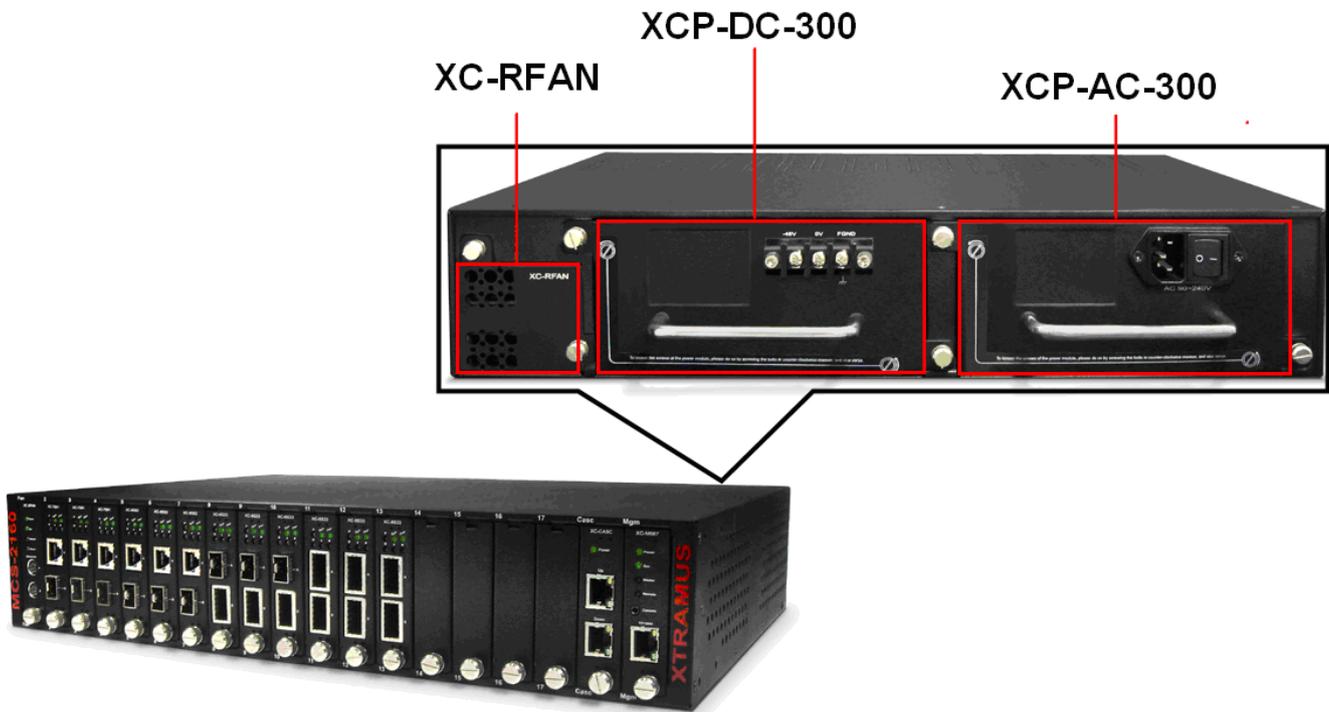

MCS-2160 Back Part Description	
XC-RFAN	It is a fan module card pre-installed in back part of MCS-2160 chassis.
XCP-DC-300	It is a power module card based on DC power source.
XCP-AC-300	It is a power module card based on AC power source.



A. XC-RFAN Fan Module

The XC-RFAN consists of two fans as shown in the figure below. After installing XC-RFAN, the Management Web Page will show the operation of XC-RFAN, please see the **3.1.4. MCS-2160 Management Webpage – Management** for more information about showing the operation of XC-RFAN.



B. XCP-DC-300

XCP-DC-300 is a power module providing power source of 300W DC Redundant SPS (Vin 36~72VDC).




The Power Jack of XCP-DC-300 is 3 Terminal Connectors: -48V, OV, FGND. The Terminal Connector -48V and OV have a screw to fix an external power source cable. The FGND also has a screw, but this screw should be fixed with an external cable connected to the ground.



C. XCP-AC-300

XCP-AC-300 is a power module providing power source of 300W AC Redundant SPS (Vin 90~240VAC).

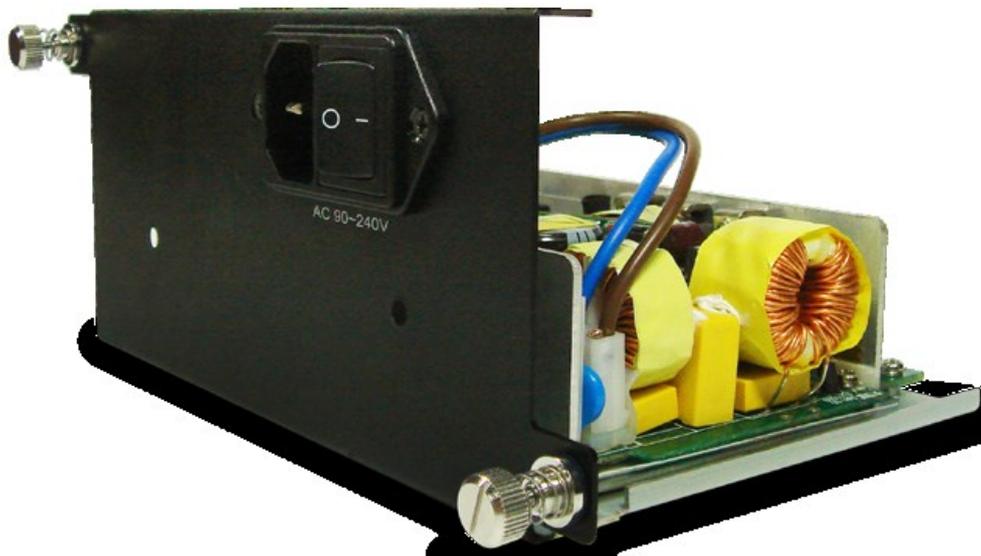

The Power Jack of XCP-AC-300 is Male IEC 320 Receptable. To activate XCP-AC-300 & XCP-AC-100, just turn on/off the O/I button after connecting a power source cable in Male IEC 320 Receptable.



1.3.5. Optional Fan Tray – MCS-FANT-05



Set MCS-FANT-05 on the base of MCS-2160, with dimension of 441 mm x 310 mm x 29 mm.

XC-SFAN's Port A and Port B are designed to provide power source and gather information for MCS-FANT fan tray. When connecting XC-SFAN to MCS-FANT fan tray, please do so by connect to MCS-SFAN's **CTRL + PWR** port to MCS-FANT's **CTRL + PWR** port, and XC-SFAN's **PWR** port to MCS-FANT's **PWR** port.

If you cross connect between **CTRL + PWR** port and **PWR** port of XC-SFAN and MCS-FANT, MCS-2160 will be seriously damaged.


Also, please note that when placing MCS-2160 on top of MCS-FANT, MCS-2160's four rubber feet must be placed properly on the MCS-FANT's four grooves, as shown in the figure down below:



To insure that MCS-FANT and MCS-2160's ventilation fans can work properly, please leave adequate space (**10 cm at least**) between the left/right sides and the bottom of MCS-FANT.



MCS-FANT contains LEDs that represent its ten fans. The figure down below shows how these fans are numbered.

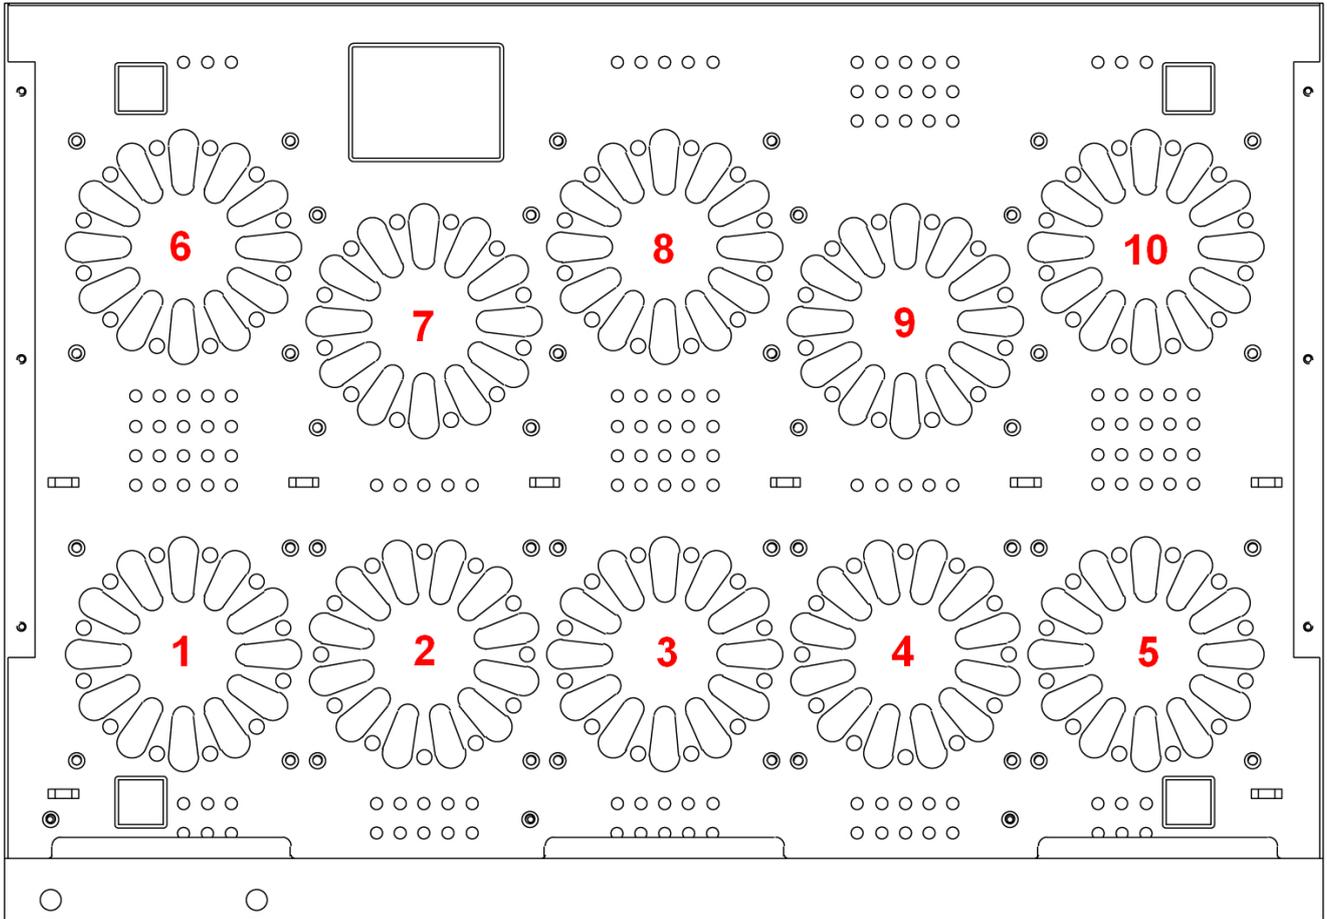



2. MCS-2160 Installation

MCS-2160 is a chassis with 16 slots for installation of media converter modules. Installing MCS-2160 is very easy and simple: all you have to do is to plug the proper fiber/UTP cables into MCS-2160 ports like a general Ethernet switch without any extra configurations. However, selecting the proper physical media and applications in your network environment is crucial when installing MCS-2160. Besides, using the proper method for installing media converter modules into MCS-2160' slots is also crucial for the proper functionality of MCS-2160. Please see the sections down below for detailed information regarding to physical media types, MCS-2160 application and the proper method for installing a media converter module.

2.1. Choices of UTP Cable and Optical fiber

2.1.1. 10GBASE-T (Copper Wire)

10GBASE-T, or IEEE 802.3an-2006, is a standard released in 2006 to provide 10 gigabit/second connections over unshielded or shielded twisted pair cables and over distances up to 100 meters (330 ft). 10GBASE-T cable infrastructure can also be used for 1000BASE-T, allowing a gradual upgrade from 1000BASE-T, and auto-negotiation to select which speed to use.

10GBASE-T Connectors


10GBASE-T uses 650 MHz versions of the venerable IEC 60603-7 8P8C (RJ-45) connectors, which is already widely used in Ethernet.

10GBASE-T Cables

10GBASE-T works up to 55 m (180 ft) with existing Category 6 cabling. In order to allow deployment at the usual 100 m (330 ft), the standard uses a new partitioned Category 6a cable specification, designed to reduce crosstalk between UTP cables.

The table down below is a reference regarding to UTP cable categories.

UTP Cable Categories References	
Cat 5	Provides performance of up to 100 MHz, and was frequently used on 100 Mbps Ethernet networks. Cat 5 may not be suitable for 1000BASE-T gigabit Ethernet.
Cat 5e	Provides performance of up to 100 MHz, and is frequently used for both 100 Mbps and Gigabit Ethernet networks.
Cat 6	Provides performance of up to 250 MHz, more than double of category 5 and 5e. It works up to 55 m (180 ft) for 10Gbps Ethernet.
Cat 6a	Provides performance of up to 500 MHz. It is suitable for 10GBASE-T and works up to 100 m (330 ft) for 10Gbps Ethernet. All the cables mentioned above do not have individually- shielded pairs as the picture here, including Cat 6a.
Cat 7	This standard specifies four individually-shielded pairs (STP) inside an overall shield. Designed for transmission at frequencies up to 600 MHz. It has better performance than Cat 6a.

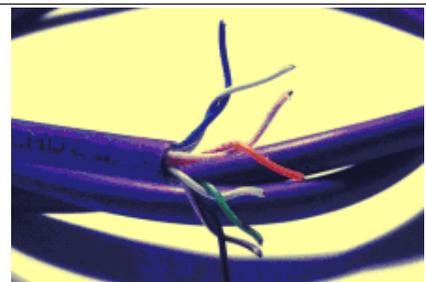



2.1.2. 10GBASE-R (Optical Fiber)

10GBASE-R is 10Gbps Ethernet connection that based on IEEE802.3ae. It uses fiber as transmission media with different specification of fiber, connector and transceiver. MCS-2160 uses two standards, 10GBASE-LR and 10GBASE-SR.

10GBASE-SR

10GBASE-SR ("Short Range") uses 64B/66B encoding and 850 nm wavelength lasers. It is designed to support short distances over deployed multi-mode fiber cabling, it has a range of between 26 meters (85 ft) and 82 meters (270 ft) depending on cable type. It also supports 300 meters (980 ft) operation over new, 50 μ m 2000 MHz-km OM3 multi-mode fiber (MMF).

The transmitter can be implemented with a VCSEL (Vertical Cavity Surface Emitting Laser) which is low cost and low power. MMF has the advantage of having lower cost connectors than SMF (single-mode fiber) due to its wider core.

10GBASE-SR delivers the lowest cost, lowest power and smallest form factor optical modules.

10GBASE-LR

10GBASE-LR ("Long Range") is a Long Range Optical technology delivering serialized 10 gigabit Ethernet over a laser with 1310 nm wavelength connection on single-mode fiber via IEEE 802.3 Clause 49 64B-66B Physical Coding Sub layer (PCS) using a line rate of 10.3125.

Single-mode optical cabling is used to interconnect transceivers at a distance spaced at 10 kilometers (6.2 mi), but it can often reach distances of up to 25 kilometers (16 mi) with no data loss.

Fabry–Pérot lasers are commonly used in 10GBASE-LR optical modules. Fabry–Pérot lasers are more expensive than VCSELs (mentioned above) but their high power and focused beam allow efficient coupling into the small core of single mode fiber.

Fiber Specification

Fibers which support many propagation paths or transverse modes are called multi-mode fibers (MMF). Fibers which can only support a single mode are called single-mode fibers (SMF). Multi-mode fibers generally have a larger core diameter, and are used for short-distance communication links and for applications where high power must be transmitted. Single-mode fibers are used for most communication links longer than 200 meters.

Fiber Buffer/Jacket Color	Meaning
Yellow	Single-mode optical fiber, long distance connection
Orange	Multi-mode optical fiber, short distance connection



Optical Fiber

As mentioned above, there are Single-mode and Multi-mode optical fiber. Both of them can be used for XC media converter module series.

Fiber Connector

Optical fiber connector contains two ends of fibers and can attach to SFP+ transceivers. There are two ports for one SFP+ transceiver: one fiber is for receiving and one fiber is for transmitting. The picture here is called LC connector that can attach to SFP+ transceiver.



Transceiver (Connector)

SFP+/XFP Transceivers can be plugged into XC media converter module's SFP+/XFP Ports. SFP+/XFP Transceivers are active components that consume power from XC media converter module and are capable of converting signals between optical data flow and electronic data flow.

For different transmission purpose, the component inside SFP+ form factor can be 10BASE-LR or 10BASE-SR mode.





2.2. Hardware Installation


Please follow the steps shown below for a better understanding on how to install hardware in MCS-2160.

2.2.1. Bracket installation

Steps for installing a Bracket in MCS-2160



First of all, you must have an Empty Slot for the Installation of a Bracket.

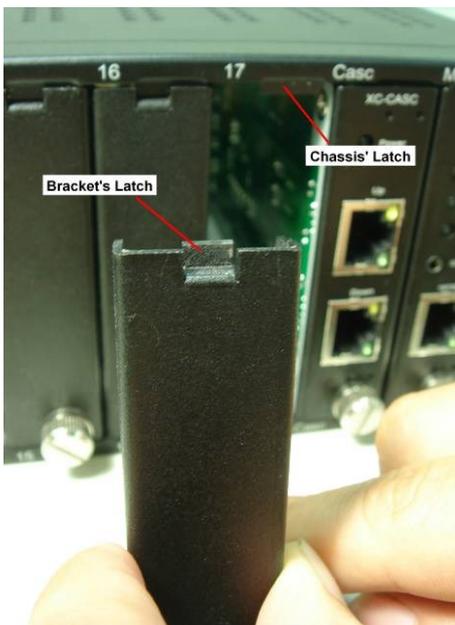

Attach the Bracket's Latch on the internal face of Chassis' Latch.



Steps for installing a Bracket in MCS-2160



After attaching the Bracket's Latch on the internal face of Chassis' Latch, let this point be a fix central rotation point and push the bottom part of Bracket into MCS-2160.




Lock the Captive Screw into the MCS-2160 to fix the Bracket into MCS-2160.



2.2.2. Module Cards Installation

Steps for installing a Media Converter Module Card in MCS-2160

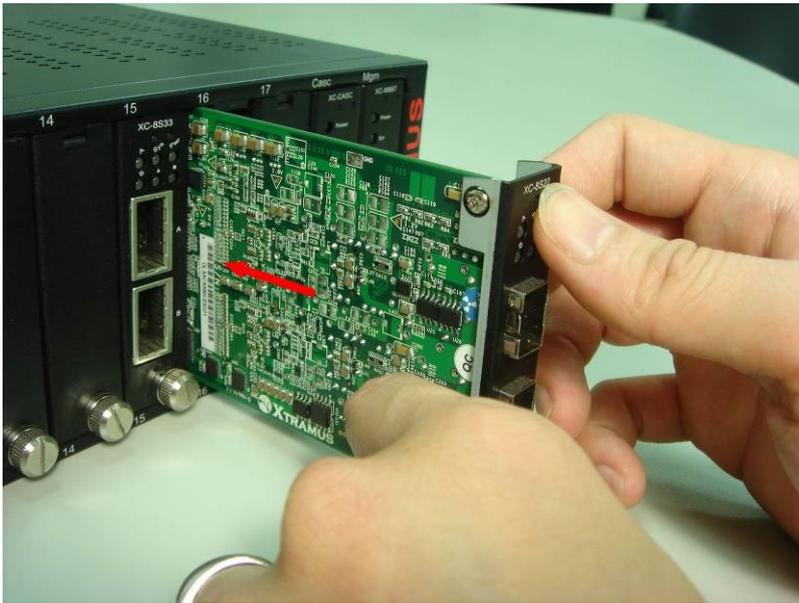


Aim the border side of a Media converter Module Card with the MCS-2160 internal slide road, and push this Module Card into MCS-2160.



Please, make sure if the Media Converter Module Card is well fixed into MCS-2160 by pushing the bracket of the Module Card into MCS-2160.



Steps for installing a Media Converter Module Card in MCS-2160

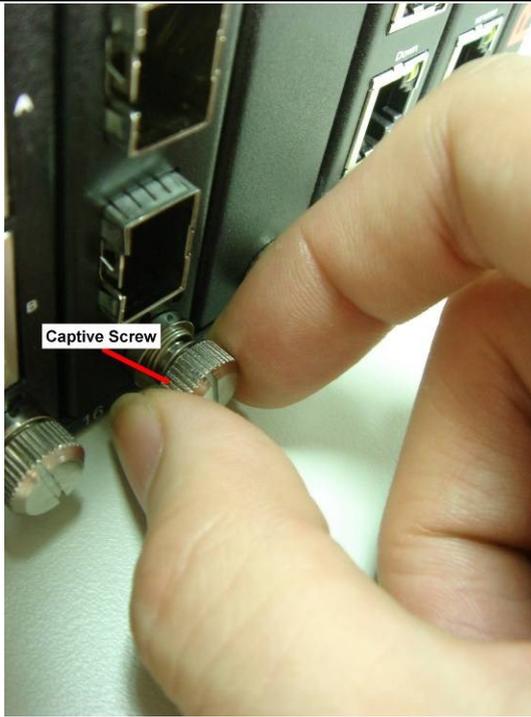


Lock the Captive Screw into the MCS-2160 to fix the Module Card into MCS-2160.

2.2.3. Power Module

2.2.3.1. XCP-DC-300

Steps for installing a XCP-DC-300

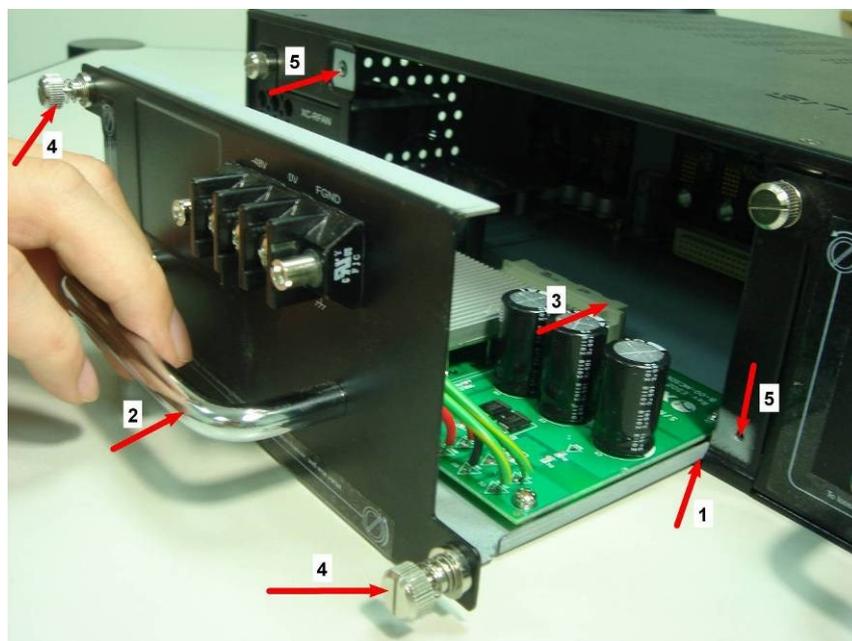


Installing a XCP-DC-300 into MCS-2160 is quite simple. First of all, attach the Power Module into the respective slot of MCS-2160 and push the handle of the Power Module into the slot. After the Bracket of the Power Module reaches the MCS-2160, lock the captive screw into MCS-2160 as shown by arrows 4 and 5.

Note: The XCP-DC-300 doesn't support hot swap. Please don't remove Power Module during System operation.



2.2.3.2. XCP-AC-300

Steps for installing a XCP-AC-300

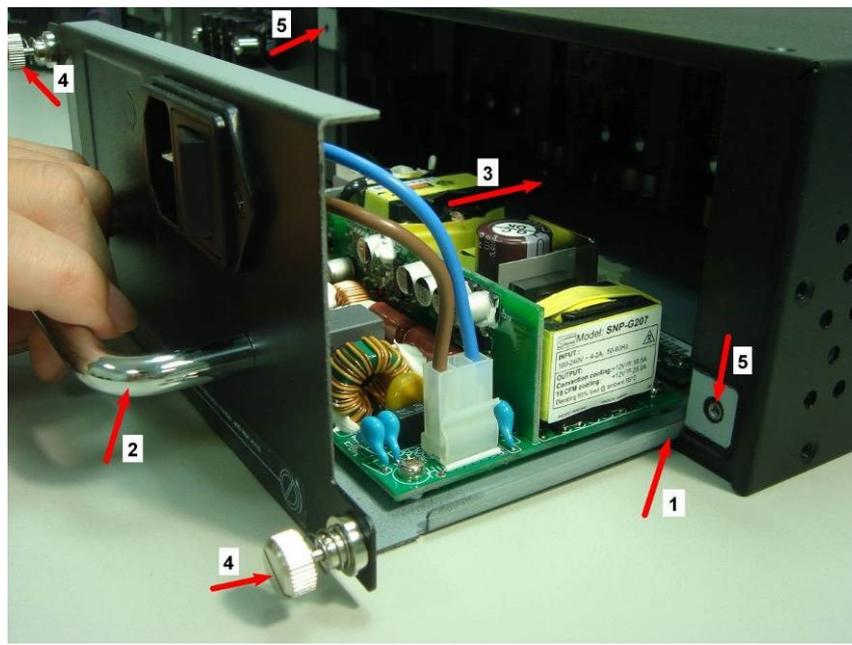

Installing a XCP-AC-300 into MCS-2160 is quite simple. First of all, attach the Power Module into the respective slot of MCS-2160 and push the handle of the Power Module into the slot. After the Bracket of the Power Module reaches the MCS-2160, lock the captive screw into MCS-2160 as shown by arrows 4 and 5.

Note: The XCP-AC-300 doesn't support hot swap. Please don't remove Power Module during System operation.

2.2.4. Fan Module

2.2.4.1. XC-SFAN

Steps for installing the XC-SFAN



The XC-SFAN comes with your MCS-2160 chassis, and shall be installed on the Fan slot located on the far left side of MCS-2160 chassis. This module card provides ventilation for the MCS-2160 chassis.


Also, XC-SFAN's CTRL + PWR and PWR ports are designed to provide power source and gather information for MCS-FANT fan tray. When connecting XC-SFAN to MCS-FANT fan tray, please do so by connect to MCS-SFAN's CTRL + PWR port to MCS-FANT's CTRL + PWR port, and XC-SFAN's PWR port to MCS-FANT's PWR port.

If you cross connect between CTRL + PWR port and PWR port of XC-SFAN and MCS-FANT, MCS-2160 will be seriously damaged.



2.2.4.2. XC-RFAN

Steps for installing the XC-RFAN

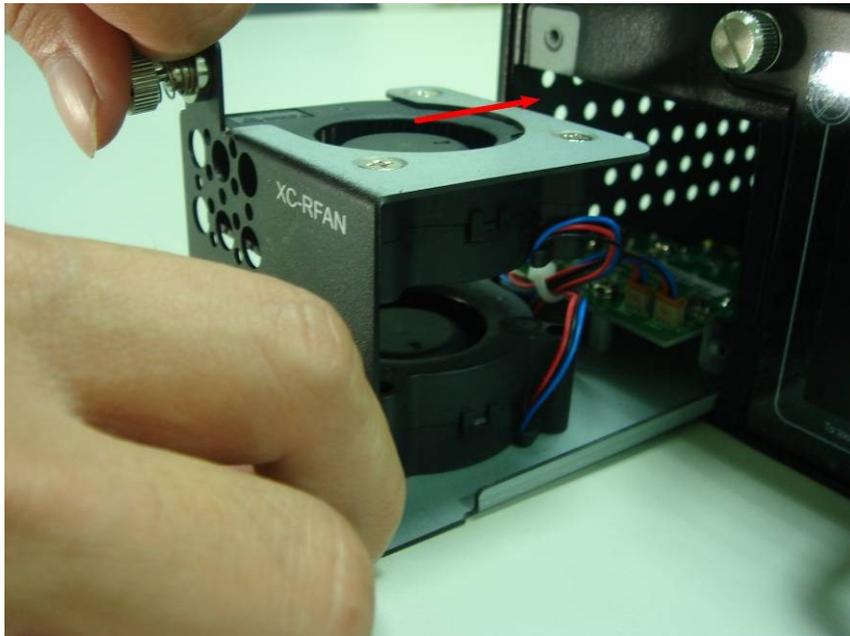


Installing the XC-RFAN is quite simple, just attach the XC-RFAN into the respective slot of MCS-2160, and push it into the slot. After the Bracket of the XC-RFAN reaches the MCS-2160, lock the captive screw into MCS-2160.

Note: The XC-RFAN doesn't support hot swap. Please don't remove Power Module during System operation.

2.2.4.3. MCS-FANT-05

Steps for installing the MCS-FANT-05

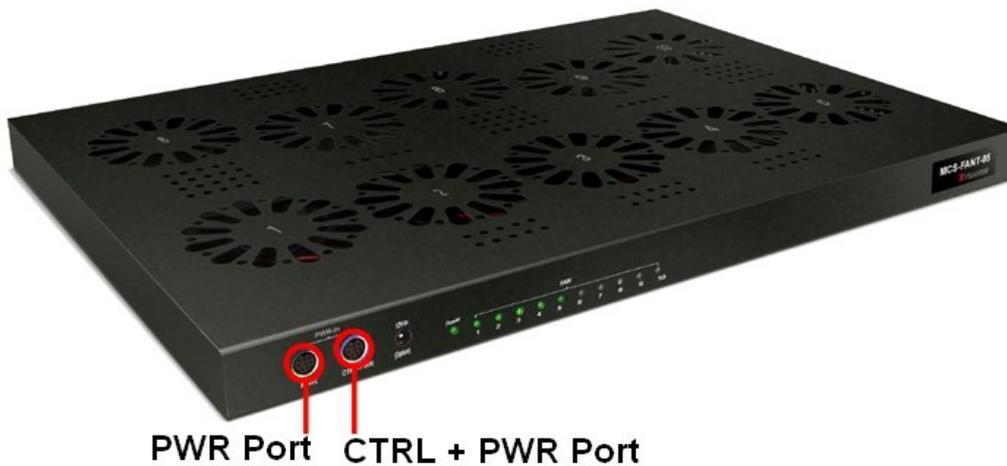

Just set the MCS-FANT-05 on the base face of the MCS-2160, and connect the CTRL + PWR port and PWR port of XC-SFAN with the CTRL + PWR port and PWR port of XC-RFAN for power supply.

Note: Cross-connection between CTRL + PWR and PWR ports will seriously damage the MCS-2160.

*Note: In a rack mount installation of MCS-2160, the distance between two MCS-2160 must be 2U (9 cm) for a better efficiency of the MCS-FANT-05.



3. MCS-2160 Management


You can configure MCS-2160's settings and view statistics generated while performing media converting with MCS-2160 by connecting MCS-2160 and PC to the same network via an RJ45 cable, and accessing MCS-2160's settings/statistics with **PC's web browser**.

Please see the sections down below for more information regarding to MCS-2160 management.

3.1. Managing MCS-2160 with Management Webpage

MCS-2160 is embedded with a management webpage, and can be accessed by connecting MCS-2160's **Management Port** to the network which your PC is connected to via an RJ45 cable.


Before accessing to MCS-2160's configuration webpage with your PC's web browser, please set the network according MCS-2160's default IP Address (**192.168.1.8**). The figure down below is an example of network/PC settings for accessing MCS-2160 management webpage.

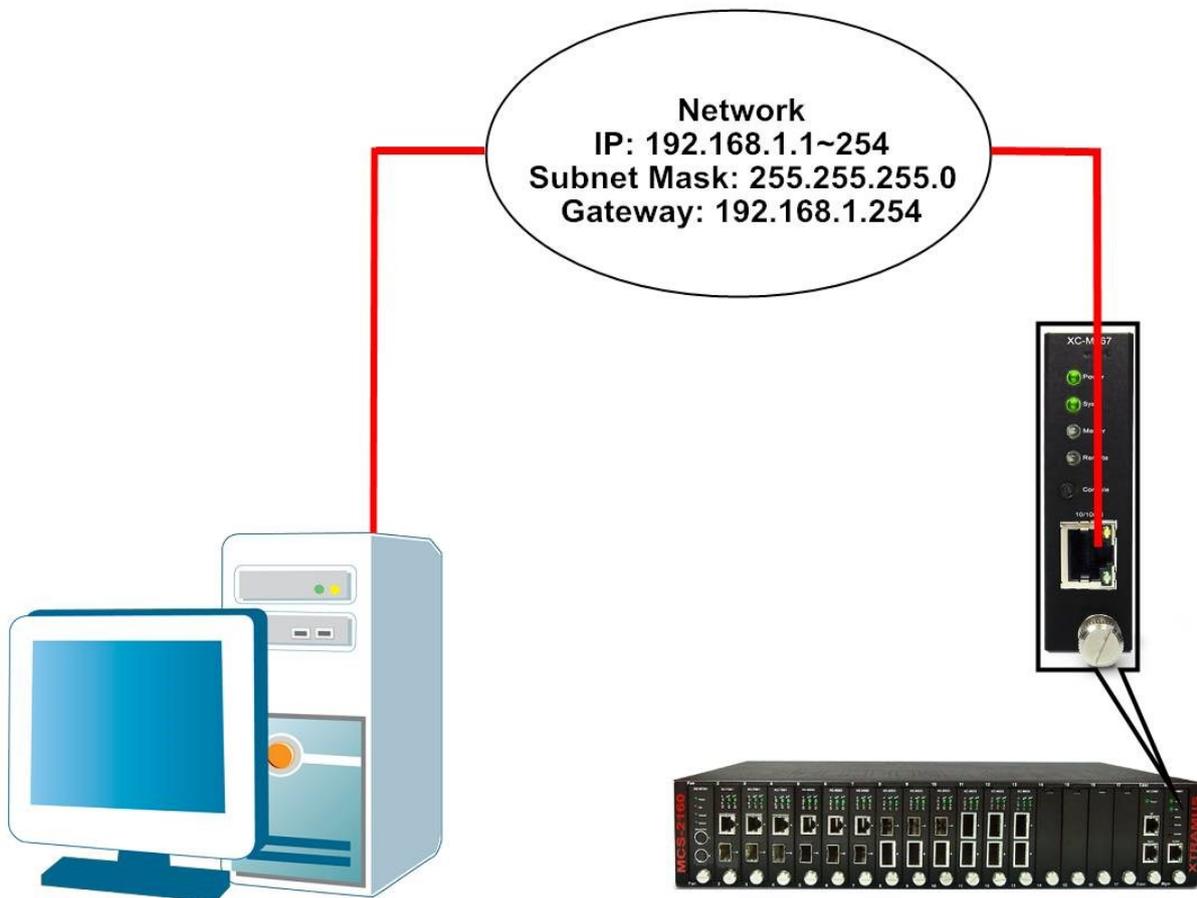



3.1.1. Accessing MCS-2160 Management Webpage

To access MCS-2160's management webpage, please open your web browser, and type in MCS-2160's default IP address (**192.168.1.8**) in web browser's URL field as shown in the figure on the right side. **If you've changed MCS-2160's IP address, please input the IP address you've changed to instead.**



MCS-2160' management webpage supports web browsers such as **Microsoft Internet Explorer ® (IE7 or above)** and **Firefox**.

MCS-2160's management webpage might not display correctly if you're using other web browser.

A window will pop up after you entering MCS-2160's IP address. Please enter the User Name and Password for MCS-2160's configuration webpage.



- **Default User Name: admin**
- **Default Password: admin***
*Please note that the User Name and Password are case-sensitive.

For safety issues, it is highly recommended that you should change the User name and Password when logging to MCS-2160's management webpage for the first time.

After inputting MCS-2160 management webpage's User Name and Password, you should be able to see MCS-2160's management webpage displayed on your web browser as shown in the figure down below.

XTRAMUS

MCS-2160

▶ System
▶ Management
▶ Maintenance
▶ Language

System Information		
S/N	0L2160667003	
MAC	00-22-A2-88-55-23	
Hardware Version	MP-02	
Firmware Version	v1.1b003	
IP Status		
IP Mode	Static	
IP Address	192.168.1.8	
Subnet Mask	255.255.255.0	
Gateway IP	192.168.1.1	
License Information		
Hardware Type	Normal	
Update Valid Date	2012-12	
Syslog Information		
Syslog Server IP	192.168.1.17	
Fan Speed		
Type	Fan1	Fan2
Side Fan	5300 RPM	5300 RPM
Rear Fan	3218 RPM	3272 RPM



3.1.2. MCS-2160 Management Webpage – Overview

The screenshot shows the XTRAMUS MCS-2160 management webpage. On the left, a navigation menu (A) includes System, Management, Maintenance, and Language. The main content area (B) is titled 'MCS-2160' and contains several sections: System Information, IP Status, License Information, Syslog Information, and Fan Speed. A red box (C) highlights the System Information and IP Status sections.

System Information	
S/N	0L2160667003
MAC	00-22-A2-88-55-23
Hardware Version	MP-02
Firmware Version	v1.1b003

IP Status	
IP Mode	Static
IP Address	192.168.1.8
Subnet Mask	255.255.255.0
Gateway IP	192.168.1.1

License Information	
Hardware Type	Normal
Update Valid Date	2012-12

Syslog Information	
Syslog Server IP	192.168.1.17

Fan Speed		
Type	Fan1	Fan2
Side Fan	5300 RPM	5300 RPM
Rear Fan	3218 RPM	3272 RPM

MCS-2160 Management Webpage Overview

A	Setting Options	<p>The Setting Options contains options for MCS-2160 settings, information, and statistics, which can be divided into:</p> <ul style="list-style-type: none"> • System: You can view system information here in this field. • Management: This option allows you to make settings such as MCS-2160's IP address, SNMP, or user accounts. • Maintenance: This option allows you to save system settings, reboot MCS-2160, and reset all MCS-2160' settings to default value. • Language: You can set the Management Webpage language as English, Chinese Simplified, Chinese Traditional, Japanese or Korean.
B	Model Name	This field displays the model name of your MCS-2160.
C	Main Display Screen	The Main Display Screen displays the system information, network tapping statistics, License Information, and Fans information.



3.1.3. MCS-2160 Management Webpage – System

3.1.3.1. System Information

System Information		
S/N	0L2160667003	
MAC	00-22-A2-88-55-23	
Hardware Version	MP-02	
Firmware Version	v1.1b003	
IP Status		
IP Mode	Static	
IP Address	192.168.1.8	
Subnet Mask	255.255.255.0	
Gateway IP	192.168.1.1	
License Information		
Hardware Type	Normal	
Update Valid Date	2012-12	
Syslog Information		
Syslog Server IP	192.168.1.17	
Fan Speed		
Type	Fan1	Fan2
Side Fan	5300 RPM	5300 RPM
Rear Fan	3218 RPM	3272 RPM

System Information displays MCS-2160' system information including:

System Information	
S/N	MCS-2160' serial number.
MAC	MCS-2160's MAC address.
Hardware version	Version of XC-M667's PCB.
Firmware Version	MCS-2160's current firmware version.
IP Status	
IP Mode	This field displays how MCS-2160 acquires its IP address. <ul style="list-style-type: none"> Static: MCS-2160's IP, subnet mask, and gateway addresses are assigned manually. DHCP: MCS-2160's IP, subnet mask, and gateway addresses are assigned automatically by a DHCP server.
IP Address	MCS-2160's IP address.
Subnet Mask	MCS-2160's subnet mask.
Gateway IP	MCS-2160's gateway address.
License Information	
Hardware Type	This field displays the device type of your MCS-2160: <ul style="list-style-type: none"> Normal: for users that purchased the License of MCS-2160. Evaluation: for users that are only testing the MCS-2160.
Update Valid Date	The time limit for using the MCS-2160.
Syslog Information	
Syslog Server IP	This field displays the IP address for connection with 3C Daemon.
Fan Speed	
Side Fan	Shows the speed of Side Fan's Fan1 and Fan2 in Rotation Per Minute (RPM).
Rear Fan	Shows the speed of Rear Fan's Fan1 and Fan2 in Rotation Per Minute (RPM).



3.1.3.2. Fan Tray Information

Fan Tray Information				
Hardware Version	MP-01			
Firmware Version	v0.1b004			
Fan Speed				
Fan1	Fan2	Fan3	Fan4	Fan5
2544 RPM	1721 RPM	2065 RPM	1695 RPM	1749 RPM
Update Fan Tray Firmware				
Choose Update file				
<input type="text"/>			<input type="button" value="Browse..."/>	<input type="button" value="Send"/>

Fan Tray Information includes:

Fan Tray Information	
Hardware Version	Shows the Hardware version of your Fan Tray.
Firmware Version	Shows the Firmware version of your Fan Tray.
Fan Speed	
Fan1/Fan2/Fan3/Fan4/Fan5	The current speed of each Fan.
Update Fan Tray Firmware	
Click the Browse... button to choose the Firmware update files, and click the Send button to start updating your Fan Tray firmware.	

*Note: The Fan Speed will auto-refresh during the operation of the MCS-2160.



3.1.4. MCS-2160 Management Webpage – Management

There are 11 options available for **Management**, which includes:

- **IP Settings:** Allows you to set how MCS-2160 will acquire its IP, subnet mask, and gateway addresses. Also, you could input these addresses manually here.
- **Syslog Settings:** Shows the link status of each module on 3CDaemon.
- **User Settings:** Allows you to change MCS-2160’s configuration webpage Password.
- **SNMP Settings:** Sets the restriction for accessing the SNMP.
- **Time Settings:** Sets the date and time display of your MCS-2160.
- **Mail Settings:** Sets the basic info for sending warning e-mail to designated mail box.
- **Safety Settings:** Sets the temperature in degree centigrade for shutdown your MCS-2160.
- **Configuration Settings:** You can save and load your MCS-2160 configuration here.
- **Media Converter Management:** Sets the MCM-W series counter of same LAN to be displayed.
- **Chassis Management:** Displays the status of MCS-2160 and modules cards, also it allows you to see the counter, to do the FPGA / Firmware upgrading, to power on/off module card and access module card’s port settings.
- **Chassis Overview:** Displays the parameters of each slot of MCS-2160.

A. IP Configuration

IP Configuration	
IP Mode	<input checked="" type="radio"/> Static <input type="radio"/> DHCP
IP Address	<input type="text" value="192.168.1.8"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.1"/>
<input type="button" value="Apply"/>	

IP Configuration	
IP Mode	You can choose how MCS-2160 acquires its IP, subnet mask, and gateway addresses. There are two modes available: <ul style="list-style-type: none"> • Static: You have to input MCS-2160’s IP, subnet mask, and gateway addresses manually in the fields down below. • DHCP: MCS-2160 acquires its IP, subnet mask, and gateway addresses automatically from network’s DHCP server.
IP Address	You can input MCS-2160’s IP address here in this field.
Subnet Mask	You can input MCS-2160’s subnet mask here in this field.
Gateway	You can input MCS-2160’s gateway address here in this field.
Apply	Apply the changes you’ve made here.

*Note1: The default IP address for MCS-2160 is 192.168.1.8.




B. Syslog Settings

Syslog Configuration


Syslog Receiver IP	192.168.1.17
<input type="button" value="Apply"/>	

Syslog Configuration	
Syslog Receiver IP	You may set your Syslog Receiver IP in this field. The default Syslog Receiver IP is 192.168.1.17 .
Apply	Apply the changes you've made here.


Before accessing Syslog Configuration for MCS-2160, please download and install the **3CDaemon** software. Please refer to the interface of **3CDaemon** shown below:

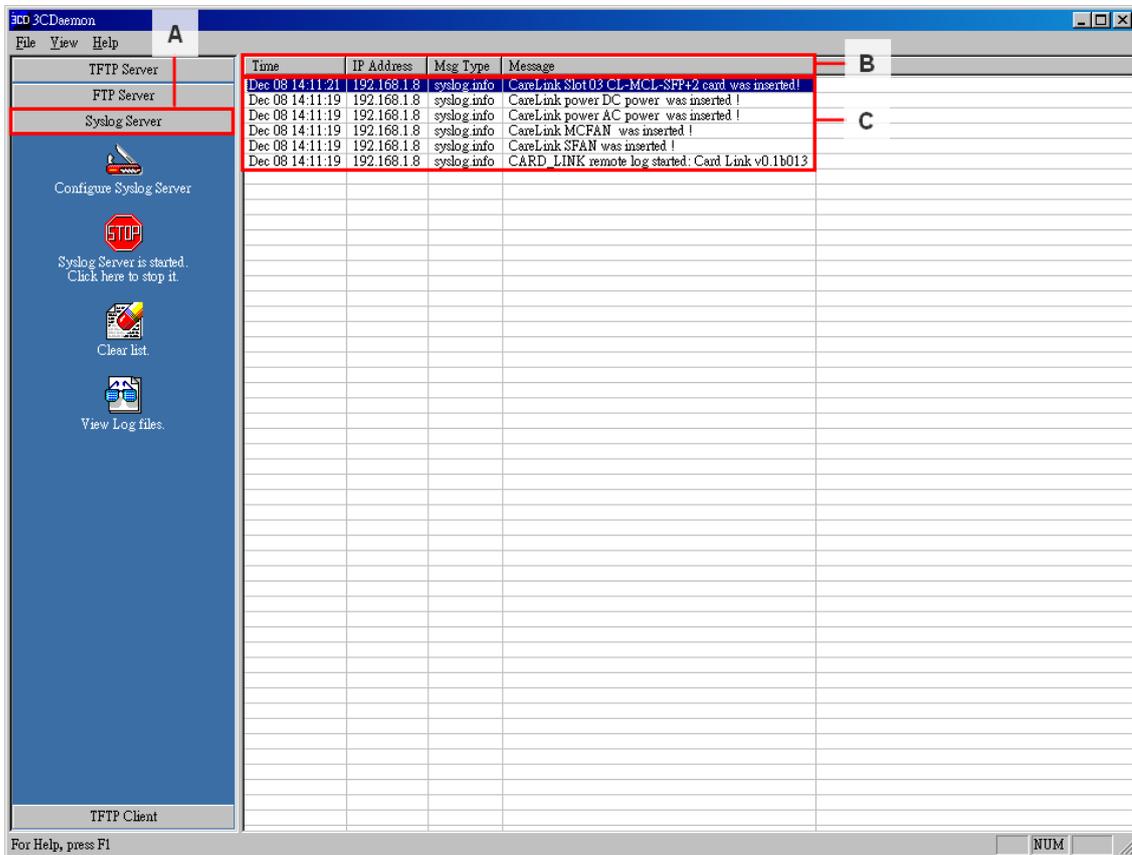


3CDaemon	
A	Please choose the Syslog Server option from the left side option of the 3CDaemon interface.
B	Time Shows the time record of each event.
	IP Address The IP address of the source.
	Msg Type The type of information currently displayed.
	Message The currently status of the connected module.
C	This field shows the currently status of each module based on Time, IP Address, Msg Type and Message. The status to be shown includes: system turn on/off, hot swap, updating F/W, module link status, IP setting, syslog setting, user setting, save changes, system reboot, update fan tray, usc setting, clear counter.

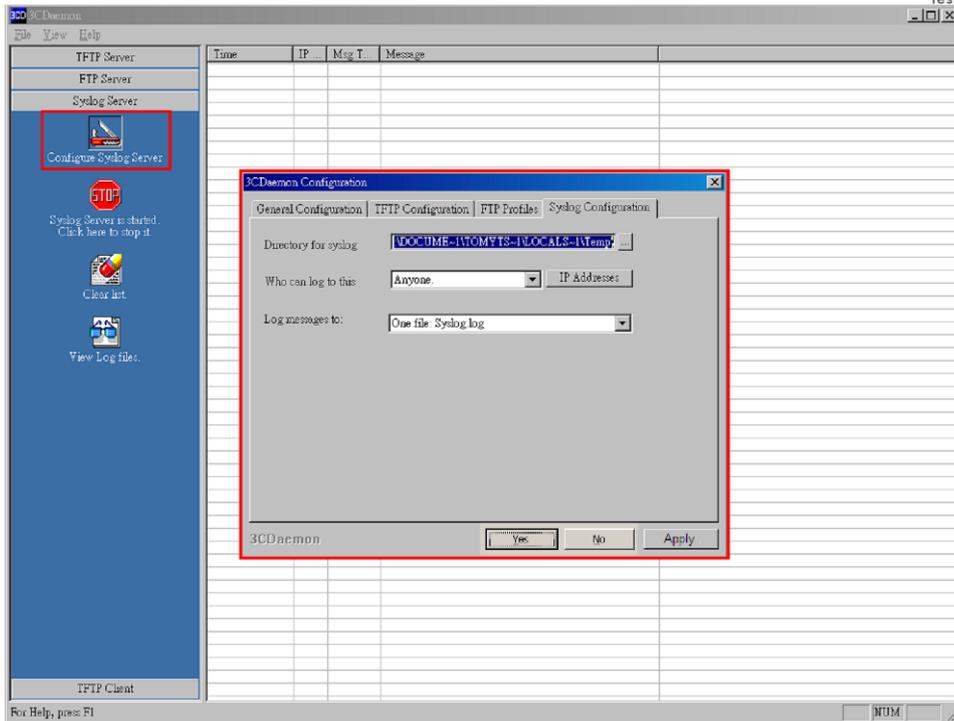


On the **Syslog Server** option, choose the **Configure Syslog Server** to pop up **3C Daemon Configuration** window. In this **3C Daemon Configuration** window, you may modify settings of: **Directory for syslog**, **Who can log to this** and **Log messages to**.

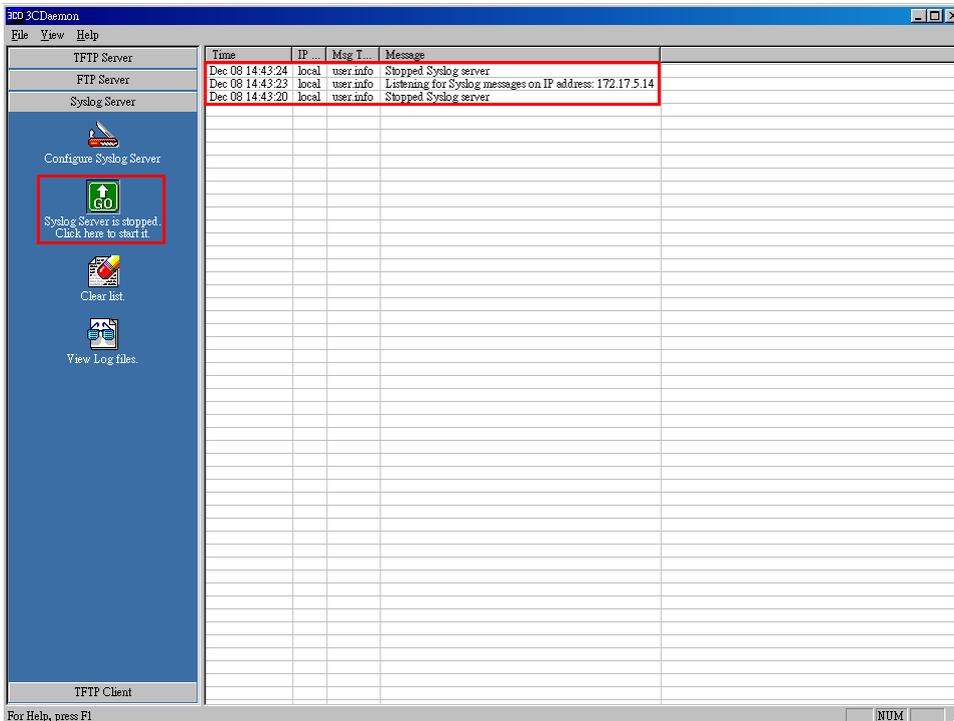

Click the button of **Stop/Start** to enable or unable 3C Daemon to receive signals from your MCS-2160.

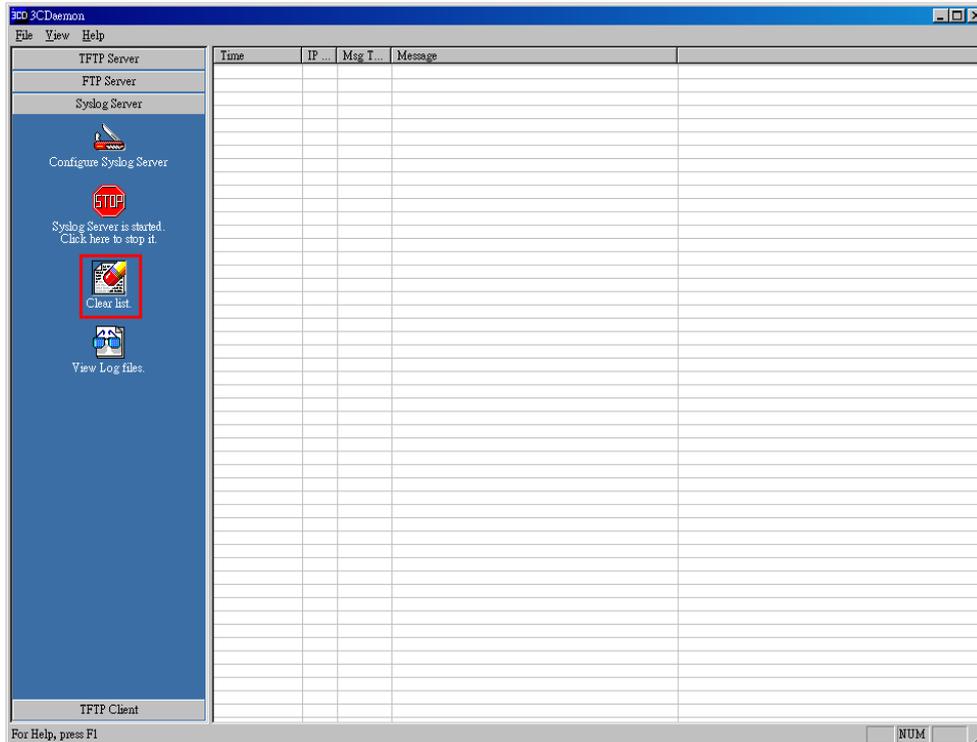

Click the **Clear list** option to delete all the records of **Time/IP Address/Msg Type/Message** of each module shown in the right field.

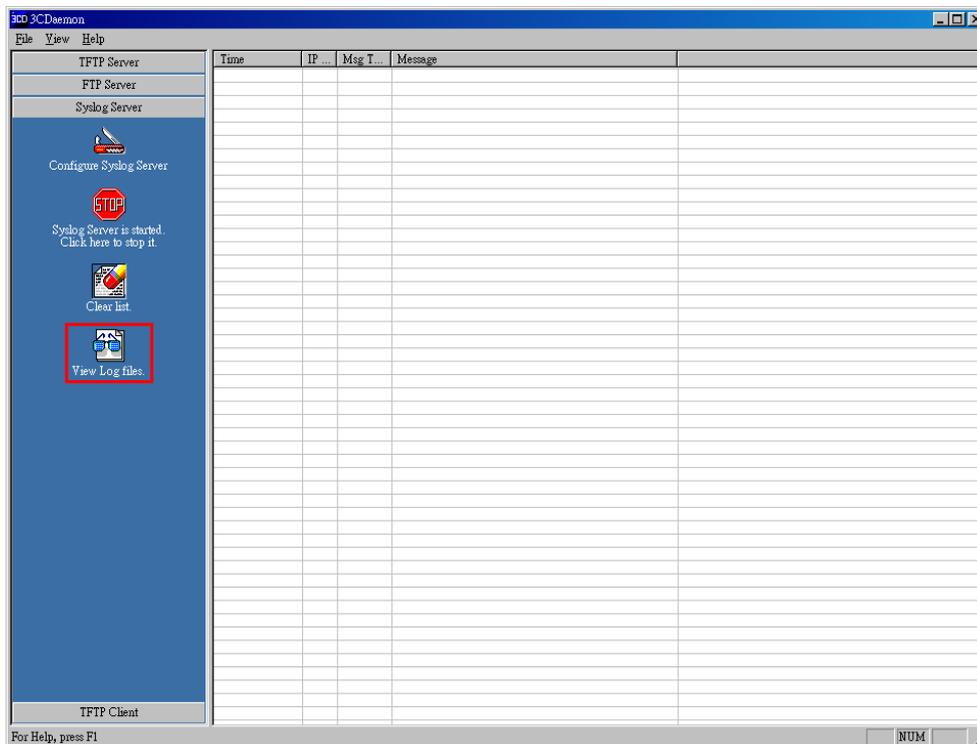

Choose the **View Log files** to open the saved log file from your PC.



C. User Settings

Administrator	
New Password	<input type="text"/>
Confirm New Password	<input type="text"/>
<input type="button" value="Apply"/>	

Guest	
New Password	<input type="text"/>
Confirm New Password	<input type="text"/>
<input type="button" value="Apply"/>	

For issues regarding to system security, MCS-2160 has 2 different user security levels, which are:

- **Administrator:** User with **Administrator** privilege can change MCS-2160 system settings and view system information/statistics.
- **Guest:** User with **Guest** privilege can only view system information/statistics.

User Settings for Administrator/Guest	
New Password	Input the password here in this field. Please note that the password must contain at least 5 alphanumeric characters and is case sensitive.
Confirm New Password	Please input the password here again for confirmation.
Apply	Apply the changes you've made here.



D. SNMP Settings

SNMP Settings	
SNMP v1&v2c	<input checked="" type="checkbox"/> Enable
Read Community	<input type="text" value="public"/>
Write Community	<input type="text" value="private"/>
SNMP v3	<input checked="" type="checkbox"/> Enable
Security Name	<input type="text" value="v3username"/>
Authentication	MD5
Auth Password	<input type="text" value="authpass"/>
Priv Password	<input type="text" value="privpass"/>
<input type="button" value="Apply"/>	
Download MIB File	
<input type="button" value="Download"/>	

SNMP v1, v2 & v3 Settings		
SNMP v1&v2	Enable	Enable or disable SNMP v1&v2's function.
	Read Community	Set read for public or private use.
	Write Community	Set write for public or private use.
SNMP v3	Enable	Enable or disable SNMP v3.
	Security Name	Set SNMP v3 username.
	Auth Password	Set authorization password for accessing SNMP v3.
	Priv Password	Set private password for accessing SNMP v3.
Apply	Apply the changes you've made here.	
Download MIB File	By clicking the Download button, you can save your SNMP Settings on your PC or search on Internet for a program to run the SNMP Settings.	



E. Time Settings

System Time Setting

PC Time: 2012-03-22 17:39:52

2000	Year	00	Month	00	Day	0	Hour	00	Minute	00	Second
Get Device Time			Set Device Time				Get Computer Time				

System Time Setting	
Get Device Time	Save the settings made from Set Device Time .
Set Device Time	Set your MCS-2160 date and time manually.
Get Computer Time	Set your MCS-2160 date and time as your current connected computer time.

*Note: for Time and Date settings please install battery on your XC-M667 module card.



F. Mail Settings

Mail Configuration	
Enable	<input type="checkbox"/>
POP3 Server Address	<input type="text"/>
E-mail Box Account	<input type="text"/>
E-mail Box Password	<input type="text"/>
Sender's E-mail Address	<input type="text"/>
Destination E-mail Address	<input type="text"/>
E-mail Sending Interval[minute]	<input type="text" value="1"/> [1-65535 minutes]
E-mail Sending Content	<input type="checkbox"/> 1.Port link state change warning. <input type="checkbox"/> 2.DDMI warning. <input type="checkbox"/> 3.Card state change warning. <input type="checkbox"/> 4.Power supply change warning. <input type="checkbox"/> 5.temperature warning. <input type="checkbox"/> 6.Fan tray warning.
<input type="button" value="Apply"/>	

Mail Configuration	
Enable	You can able or disable your MCS-2160 mail warning function.
POP3 Server Address	Sets your POP3 server address.
E-mail Box Account	Sets the e-mail account for your MCS-2160.
E-mail Box Password	Sets the e-mail password for your MCS-2160.
Sender's E-mail Address	Sets the e-mail address of the Sender of warning e-mail.
Destination E-mail Address	Sets the e-mail address of the Receiver of warning e-mail.
E-mail Sending Interval(minute)	Sets the time interval for sending the e-mail.
E-mail Sending Content	Selects the content to be included on your warning e-mail. There includes Port link state change warning, DDMI warning, Card state change warning, Power supply change warning, Temperature warning and Fan tray warning.
Apply	Apply the changes you've made here.

*Note: XC-7S81 module card doesn't support the function "Temperature warning".



G. Safety Settings

Safety Configuration	
Enable	<input type="checkbox"/>
Temperature threshold	75 degrees centigrade
<input type="button" value="Apply"/>	

Safety Settings	
Enable	You can able or disable the Safety Configuration function.
Temperature threshold	Your MCS-2160 will shutdown when it reach the temperature (60, 65, 70, 75, 80) that you set here to avoid any damage to your MCS-2160 system.
Apply	Apply the changes you've made here.

*Note: XC-7S81 module card doesn't support the "Safety Configuration" function.

H. Configuration Settings

Upload or Download Configuration	
Upload Configuration File	
<input type="text"/>	<input type="button" value="Browse..."/> <input type="button" value="Upload"/>
Download Configuration File	
<input type="button" value="Download"/>	

Upload or Download Configuration	
Upload Configuration File	You can choose the file to be uploaded by clicking the Browse... button and than click the Upload button to process the uploading.
Download Configuration File	You can save as your MCS-2160's setting by clicking the Download button.



I. Media Converter Management

Media Converter Management

Connection Table:

Index	Status	Type	IP	SNMP Private	SNMP Public	Note
-------	--------	------	----	--------------	-------------	------

Media Converter Management

Connection Table:

Index	Status	Type	IP	SNMP Private	SNMP Public	Note
1	Static	MCM-8S82-W	192.168.1.9	private	public	

Above shows the Media Converter Management option interface. You can set the Media Converter of the same LAN of your MCS-2160 to be displayed by choosing **Create new user** button, and then choose the **Go** button to apply your settings. For more details, please see the table below:

Media Converter Management Settings	
Index	The order number of the selected Media Converter .
Status	Shows the status of selected Media Converter .
Type	Display the Media Converter type.
IP	The IP address of the selected Media Converter .
SNMP Private/Public	The privacy status of SNMP of the selected Media Converter .
Note	You may type notes on this field during Create new user .
Create	Choosing this option allows you to create a new account of Media Converter .
Edit	Choosing this option allows you to modify the settings of the selected Media Converter made on Create option.
Delete	Choosing this option allows you to delete selected Media Converter .
Go	Apply the changes you've made here.
Counter	Show the Counter table of the selected Media Converter .

For the Media Converter of the same Network Segment as MCS-2160, the Media Converter will be auto-detected and auto-created as a new user on the list of Media Converter Management.



If you click the **Counter** button as shown below, you will open the Counter screen of the Media Converter showing the Network Port Statistics:

Media Converter Management

Connection Table:

	Index	Status	Type	IP	SNMP Private	SNMP Public	Note
○	1	Static	MCM-8S82-W	192.168.1.9	private	public	

Please refer to the figure down below for the Counter screen of Media Converter:

Media Converter Counter



A
B

Network Port Statistics			<input type="button" value="Clear"/>
	Port A	Port B	
Media Type	--	--	
Link	--	--	
Speed	--	--	
Utilization(%)	--	--	
Line Rate(M bps)	--	--	
Packet	--	--	
Byte	--	--	
Broadcast	--	--	
Multicast	--	--	
Unicast	--	--	
Pause	--	--	
Size:Undersize	--	--	
Size:64 Bytes	--	--	
Size:65~127 Bytes	--	--	
Size:128~255 Bytes	--	--	
Size:256~511 Bytes	--	--	
Size:512~1023 Bytes	--	--	
Size:1024~1522 Bytes	--	--	
Size:Oversize	--	--	
CRC Error	--	--	

Media Converter Counter	
A	Scroll down this field to select others Media Converter that is connected to the same LAN as your MCS-2160 to show their respective Counter.
B	Click the Clear button to clean the Network Port Statistics of the Media Converter's Counter.




J. Chassis Management

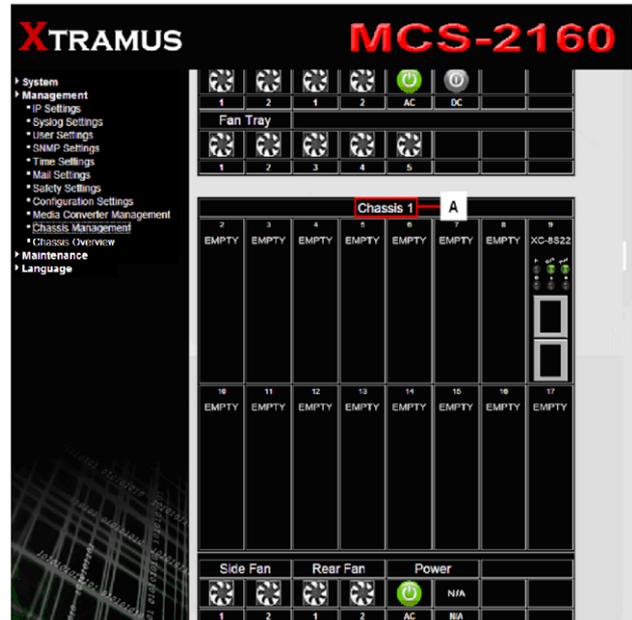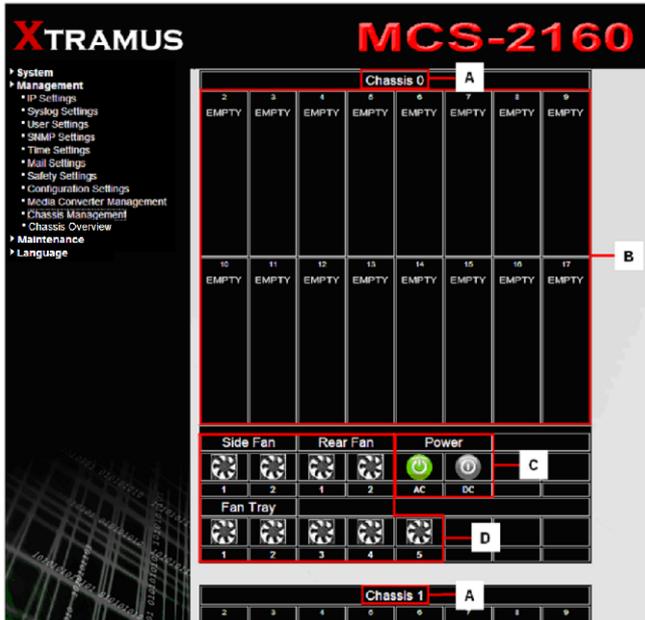


Choosing the Chassis Management option will pop up the Port State Overview screen as shown above. In here, you will find the status of slot 2~17, XC-SFAN, XC-RFAN, Fan Tray, XCP-DC-300 & XCP-DC-100 and XCP-AC-300 & XCP-AC-100. This interface will also display all the cascaded MCS-2160 ID by order of Chassis 0, Chassis1, Chassis2 up to Chassis9.

Port State Overview	
A	Display the Chassis ID.
B	Shows the status of each slot 2~17, from the top left to the top right is slot 2~9, and from the bottom left to the bottom right is slot 10-17.
C	Shows the status of XCP-DC-300 & XCP-DC-100 and XCP-AC-300 & XCP-AC-100, if the left one turns green, than indicates that the MCS-2160 is power on by XCP-AC-300 or XCP-AC-100; if the right one turns green, than indicates that the MCS-2160 is power on by XCP-DC-300 or XCP-DC-100.
D	Shows the status of XC-SFAN (Side FAN), XC-RFAN (Rear FAN) and MCS-FANT, where FAN1, FAN2...FAN5 refers to the number marked on the physical MCS-FANT.


*Note : The system is able to cascade up to 10 MCS-2160.

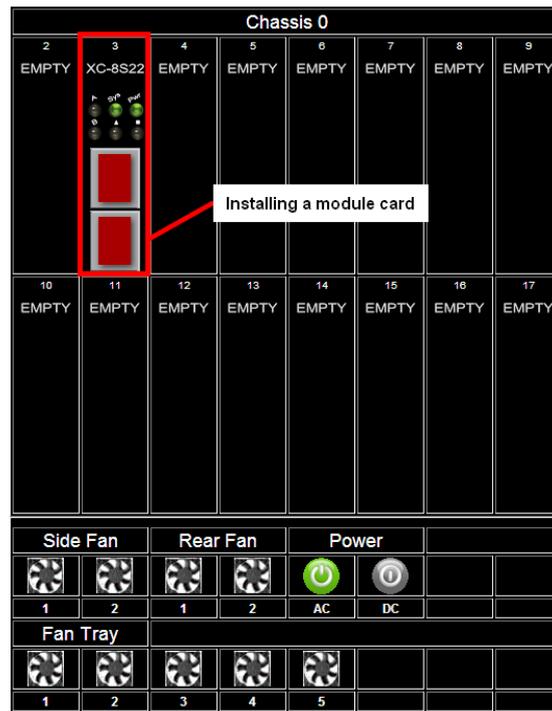

After installing a module card in one of the slot 2-17, it will modify the inserted slot as shown above. Initially, the port of the slot will show in red color which indicates that the module card is initiating the connection with chassis. The slot will turn black when the module card completes the connection with chassis.

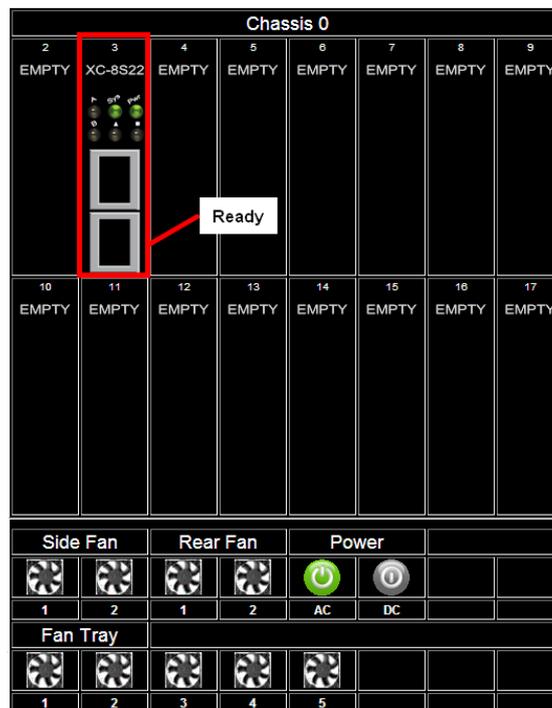

After few seconds of the installation of the module card, the Sys / Pwr LED will turn green, and the port of the module card will turn in black, this indicates respectively that the module card is ready for use and the port is available for connecting a cable.

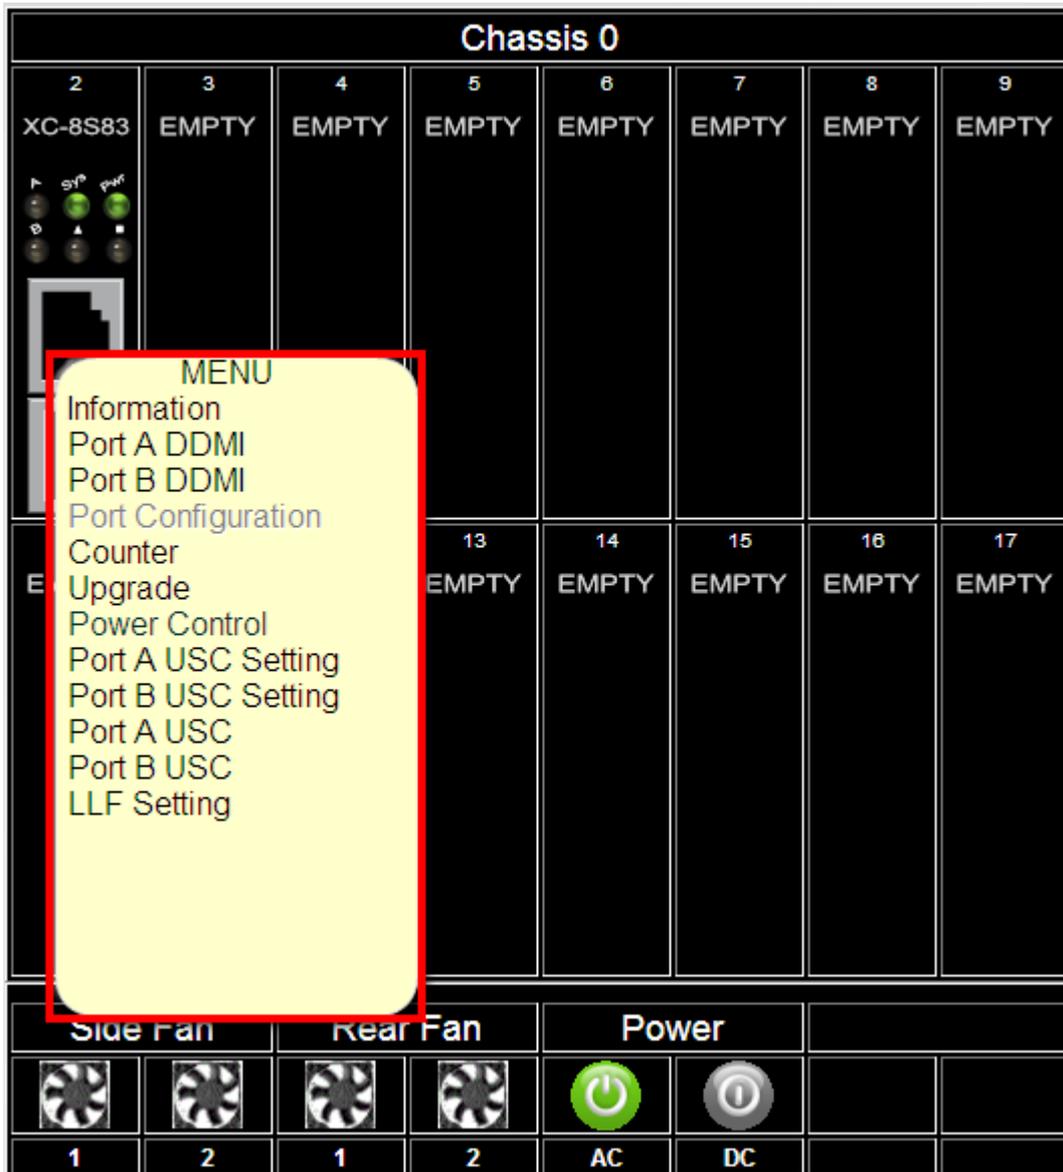

Click the slot with the module card installed to show a table of options as shown above.

Module Card Options	
Information	Shows the Module Card information
Port A/B DDMI	Shows the DDMI's parameters of Port A/B
Counter	Shows the Port Counter Statics
Upgrade	Allows you to update the Firmware and FPGA
Power Control	Allows you to turn on / off the Module Card
Port A/B USC Setting	Allows you to turn on / off and setting the Port A/B USC
Port A/B USC	Allows you to see/ refresh/ clean the Port A/B USC table

Note: The XC-8SXX series don't support Port Configuration function.



a. Information

Click the **Information** option to pop up the **Card Information / License Information** window as shown above.

Card Information	
S/N	0LMCM8S22116
MAC Address	00-22-A2-31-80-0D
Hardware Version	MP-03
FPGA Version	v1.0b028
Firmware Version	v1.0b019
Temperature	28 degrees centigrade
Port A Factory	n/a
Port A Wavelength	n/a
Port B Factory	n/a
Port B Wavelength	n/a

License Information	
Hardware Type	Normal
Demo Time Left	--

Card Information	
S/N	Serial Number of Module Card
MAC Address	MAC Address of Module Card
H/W Version	Version of Module Card's PCB
FPGA Version	Version of FPGA
Firmware Version	Version Firmware
Temperature	The current Module Card's temperature
Port A/B Factory	You can view the manufacturer of your transceiver inserted in the media converter module cards.
Port A/B Wavelength	You can view the wave length of your transceiver inserted in the media converter module cards.

***Note: The Temperature may auto-refresh during the operation of the MCS-2160. The Port A/B Factory and Wavelength will auto-refresh if you change the optical transceiver of your Port A/B.**

License Information	
Hardware Type	This field displays the device type of your MCS-2160: <ul style="list-style-type: none"> Normal: for users that purchased the License of MCS-2160. Evaluation: for users that are only testing the MCS-2160.
Demo Time Left	The time limit for using the MCS-2160.



b. Port A/B DDMI

Click the Port A/B DDMI option to access the interface showing the parameters of DDMI for Port A/B.

Port A Digital Diagnostics Monitoring Interface

Type	Current Value	Maximum Value	Minimum Value	Warning Maximum
Temperature (°C)	n/a	n/a	n/a	n/a
Supply Voltage (mV)	n/a	n/a	n/a	n/a
Tx Bias Current (mA)	n/a	n/a	n/a	n/a
Tx Power (dBm)	n/a	n/a	n/a	n/a
Rx Power (dBm)	n/a	n/a	n/a	n/a

Port A/B Digital Diagnostics Monitoring Interface

Temperature (°C)	Shows the Current temperature of the module card, and the Maximum, Minimum and Warning Maximum temperature supported.
Supply Voltage (mV)	Shows the Current voltage supplied in mV, and the Maximum, Minimum and Warning Maximum acceptable voltage.
Tx Bias Current (mA)	Shows the current Tx Bias Current in mA.
Tx Power (dBm)	Shows the Current Tx Power in mW, and the Maximum, Minimum and Warning Maximum Tx Power supported.
Rx Power (dBm)	Shows the Current Rx Power in mW, and the Maximum, Minimum and Warning Maximum Rx Power supported.

*Note: The DDMI's parameter will auto-refresh during the operation of MCS-2160.



c. Counter

Click the **Counter** to pop up the **Port Counter Statistics** window as shown above. The **Port Counter Statistics** can display statistics reports of MCS-2160's **Port A/B**.

Port Counter Statistics		
(Chassis 0 Solt 2 XC-8S82)		Refresh Clear
	Port A	Port B
Media Type	RJ45	SFP+
Link	Link Down	Link Down
Speed	n/a	n/a
Utilization(%)	0	0
Line Rate(M bps)	0.00	0.00
Packet	0	0
Byte	0	0
Broadcast	0	0
Multicast	0	0
Unicast	0	0
Pause	0	0
Size:Undersize	0	0
Size:64 Bytes	0	0
Size:65~127 Bytes	0	0
Size:128~255 Bytes	0	0
Size:256~511 Bytes	0	0
Size:512~1023 Bytes	0	0
Size:1024~1522 Bytes	0	0
Size:Oversize	0	0
CRC Error	0	0

Port Counter Statistics	
Refresh	Refresh the configuration webpage and update the latest statistics.
Clear	Clear all statistics displayed in the table.

Note: The Counter will also show the Chassis order and the order of the slot with the current module card. For instance, the figure above shows Chassis 0 Card 3.



d. Upgrade

Click the **Upgrade** option to pop up the window for **Update Firmware** and **Update FPGA** as shown above.

Update Firmware

Choose Update file	
<input type="text"/>	<input type="button" value="Browse..."/> <input type="button" value="Send"/>

Update FPGA

Choose Update file	
<input type="text"/>	<input type="button" value="Browse..."/> <input type="button" value="Send"/>

Update F/W (Firmware)	
Browse...	Click the Browse... button to choose the firmware file you would like to upgrade. MCS-2160's firmware files are in the format of "*.bin" .
Send	Click this button to start upgrading MCS-2160's firmware.
Update FPGA	
Browse...	Click the Browse... button to choose the FPGA file you would like to upgrade. MCS-2160's FPGA files are in the format of "*.bin" .
Send	Click this button to start upgrading MCS-2160's FPGA.

When updating the Firmware or FPGA, a progress bar will be displayed as shown below:



When finished updating the Firmware or FPGA, a warning window will pop up as shown below:





e. Power Control

Click the **Power Control** option to pop up the **Power Control** window as shown below.

Power Control

Power Control

Warning! Do not remove the module card from the chassis until all LEDs on the module card are off.

Power OFF
Power ON

Power Control	
Power Off	Turns off the Module Card
Power On	Turns on the Module Card

f. Port A/B USC Setting

Click the **Port A/B USC Setting** option to pop up the **Port A/B USC Setting** window as shown above.

Port A USC Setting

USC ON/OFF	<input type="checkbox"/> ON					
USC Type	<input checked="" type="radio"/> DA	<input type="radio"/> SA	<input type="radio"/> VID	<input type="radio"/> MPLS	<input type="radio"/> DIP	<input type="radio"/> SIP
	<input type="radio"/> DPort	<input type="radio"/> SPort				
USC Value	<input type="text" value="XX-XX-"/>	<input type="text" value="00-00-00-00"/>				
Apply						

Port A/B USC Setting	
USC ON/OFF	Turns on/off the USC function.
USC Type	The types of USC includes: DA, SA, VID, MPLS, DIP, SIP, DPort, Sport.
USC Value	Allows you to input USC number.
Apply	Apply the changes you've made here.



g. Port A/B Universal Stream Counter

Click the Port A/B USC option to pop up Port A/B Universal Stream Counter window as shown below.

Port A Universal Stream Counter							
DA	Line Rate	Packets	Bytes	Broadcast	Multicast	IP Checksum Error	CRC Error
xx-xx-00-00-00-00	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-01	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-02	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-03	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-04	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-05	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-06	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-07	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-08	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-09	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0A	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0B	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0C	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0D	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0E	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-0F	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-10	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-11	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-12	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-13	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-14	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-15	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-16	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-17	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-18	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-19	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1A	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1B	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1C	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1D	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1E	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-1F	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-20	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-21	0Mbps	0	0	0	0	0	0
xx-xx-00-00-00-22	0Mbps	0	0	0	0	0	0

Port A/B Universal Stream Counter	
Refresh	Refresh the Counter and update the latest statistics.
Clear	Clear all statistics displayed in the table.

***Note:** The results of each parameters will auto-refresh during the operation of MCS-2160.

h. Link Loss Forwarding (LLF)

Clicking the Link Loss Forwarding option will pop up the interface shown below, if you select Enable, you will enable the Link Loss Forwarding function of your MCS-2160.

Link Loss Forwarding Settings

Enable	<input type="checkbox"/>
<div style="border: 1px solid gray; padding: 2px 10px; display: inline-block;">Apply</div>	



i. Module Card Options_XC-7S81

For XC-7S81 module card management function, it includes **Port Configuration** function.



The XC-7S81 module card management doesn't include the **Port A/B USC Setting** and **Port A/B USC** function.



Clicking the **Port Configuration** button will pop up the interface shown below:

Media Type Setting	
Port A (RJ45)	Port B (SFP)
<input checked="" type="radio"/> Auto Negotiation <input type="radio"/> Force 100M <input type="radio"/> Force 10M <input type="radio"/> Off	<input checked="" type="radio"/> Auto Negotiation <input type="radio"/> Force 1G <input type="radio"/> Force 100M <input type="radio"/> Off
<input type="button" value="Apply"/>	
Flow Control Setting	
Port A (RJ45)	Port B (SFP)
<input checked="" type="radio"/> On <input type="radio"/> Off	<input checked="" type="radio"/> On <input type="radio"/> Off
<input type="button" value="Apply"/>	

Port Configuration_XC-7S81		
Media Type Setting	Auto Negotiation	Select this option to let the system to decide the Media Type.
	Force 10/100/1000M, 10G	The availability of the media speed will depend on the capacity of each module card. Selecting this option, will force the system to run under the indicated velocity.
	Off	This option will lead the module card connection to link down status.
Flow Control Setting	On	Turn On the Flow Control function.
	Off	Turn Off the Flow Control function.
Apply	Clicking on Apply of Media Type Setting and Flow Control Setting to respectively save each configuration.	



K. Chassis Overview

Chassis Overview						
<input type="button" value="Refresh"/>						
Chassis 0	Slot 2		Slot 3		Slot 4	
	Port A	Port B	Port A	Port B	Port A	Port B
Media Type	RJ45	XFP	n/a	n/a	n/a	n/a
Speed	n/a	n/a	n/a	n/a	n/a	n/a
Utilization(%)	0	0	n/a	n/a	n/a	n/a
Line Rate(M bps)	0.00	0.00	n/a	n/a	n/a	n/a
Packet	0	0	n/a	n/a	n/a	n/a
CRC Error	0	0	n/a	n/a	n/a	n/a
DDMI: Temperature(°C)	n/a	n/a	n/a	n/a	n/a	n/a
DDMI: Supply Voltage(mV)	n/a	n/a	n/a	n/a	n/a	n/a
DDMI: Tx Bias Current(mA)	n/a	n/a	n/a	n/a	n/a	n/a
DDMI: TX Power(dBm)	n/a	n/a	n/a	n/a	n/a	n/a
DDMI: RX Power(dBm)	n/a	n/a	n/a	n/a	n/a	n/a
Factory	n/a	n/a	n/a	n/a	n/a	n/a
Wavelength	n/a	n/a	n/a	n/a	n/a	n/a

The Chassis Overview will display the parameters of all the MCS-2160' slots, please refer to the figure above. If you click the refresh button, you can refresh all the parameters.

All the cascaded MCS-2160' slots will be displayed on the same interface, in which each MCS-2160 will be named in order of Chassis 0, Chassis 1, ..., Chassis 9.



3.1.5. MCS-2160 Management Webpage – Maintenance

Four options are available in the **Maintenance** configuration webpage: **Save Changes**, **Update F/W**, **System Reboot**, and **Factory Defaults**.

A. Save Changes

Save Changes	
Save	If you don't save the setting you've made via MCS-2160's configuration webpage, all settings will be erased after rebooting MCS-2160. Please click the " Save " button to save the settings to MCS-2160's NV-RAM.

B. Update F/W (Firmware)

Update F/W (Firmware)	
Browse...	Click the Browse... button to choose the firmware file you would like to upgrade. MCS-2160's firmware files are in the format of "*.bin" .
Send	Click this button to start upgrading MCS-2160's firmware.

*Note: For updating your MCS-2160, please update first all the MGM_RTC_v1.1b002 version, and than update to the MGM_RTC_v1.1b003 or newest.



C. System Reboot

System Reboot

System reboot
Warning! System will reboot! All unsaved data/settings will be lost after system reboot.
<input type="button" value="Reboot"/>

System Reboot	
Reboot	You can reboot MCS-2160 by clicking the “ Reboot ” button. Please note that all unsaved settings will be lost after system reboot.

D. Factory Defaults

Restore Default Settings

Restore to Default Settings
Warning! System will restore all settings to default settings! All data and previous settings will be lost after restore to default settings.
<input type="button" value="Restore"/>

Factory Defaults	
Restore	You can set all MCS-2160’s settings to the default value by clicking the “ Restore ” button.


3.1.6. MCS-2160 Management Webpage – Language

<ul style="list-style-type: none"> ▶ System ▶ Management ▶ Maintenance <li style="border: 2px solid red; padding: 2px;">▶ Language <ul style="list-style-type: none"> ▪ English ▪ 简体中文 ▪ 繁體中文 ▪ 日本語 ▪ 한국어 	<h4>Restore Default Settings</h4> <table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">Restore to Default Settings</td> </tr> <tr> <td style="text-align: center;">Warning! System will restore all settings to default settings! All data and previous settings will be lost after restore to default settings.</td> </tr> <tr> <td style="text-align: center;"><input type="button" value="Restore"/></td> </tr> </table>	Restore to Default Settings	Warning! System will restore all settings to default settings! All data and previous settings will be lost after restore to default settings.	<input type="button" value="Restore"/>
Restore to Default Settings				
Warning! System will restore all settings to default settings! All data and previous settings will be lost after restore to default settings.				
<input type="button" value="Restore"/>				

Three languages version are available for you to choose: English, Simplified Chinese, Traditional Chinese, Japanese and Korean.



3.2. Managing MCS-2160 with HyperTerminal

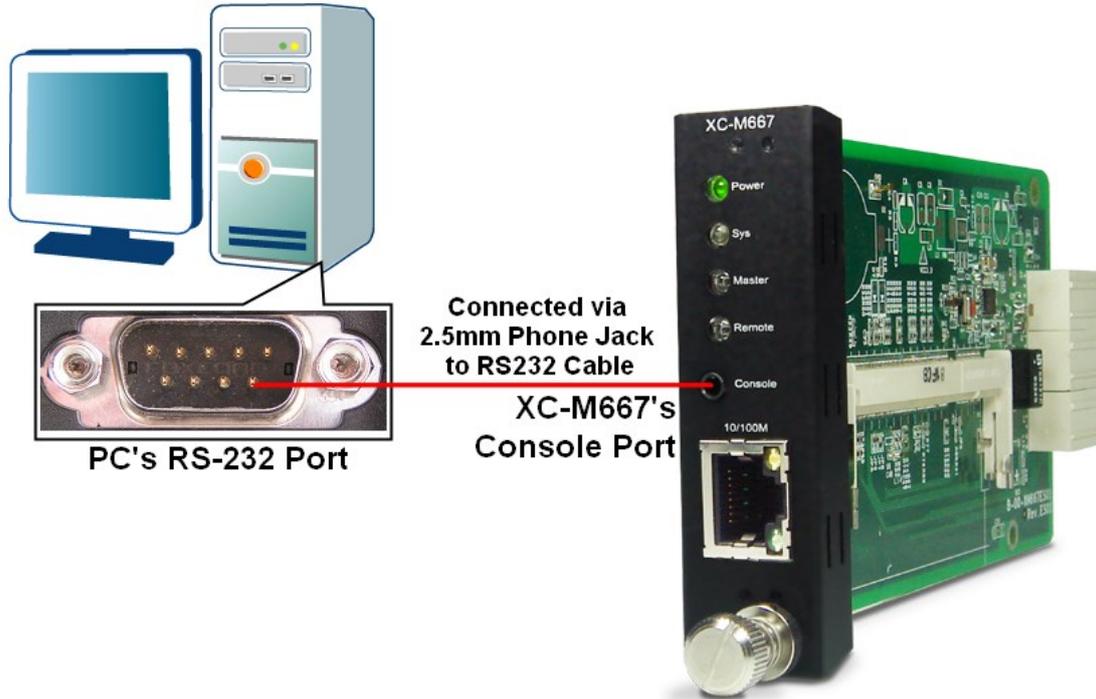


MCS-2160 allows users to make system configurations and view test statistics/system information with **HyperTerminal**. To access MCS-2160 via **HyperTerminal**, you have to connect XC-M667's **Console Port** with **PC's RS-232 Port** via a 2.5mm Phone Jack to RS-232 cable as shown in the figure above.

Please Note: If you log in the **Hyper Terminal** to access the MCS-2160 system, the previous accessed **Web Management** or **Telnet** will automatically log out from the MCS-2160 system.



3.2.1. HyperTerminal Settings for MCS-2160

After connecting the **PC's serial port** to XC-M667's **Console Port** via a **2.5mm Phone Jack to RS-232 cable**, please start the **HyperTerminal** software installed on your PC and establish connection according to the steps listed down below.

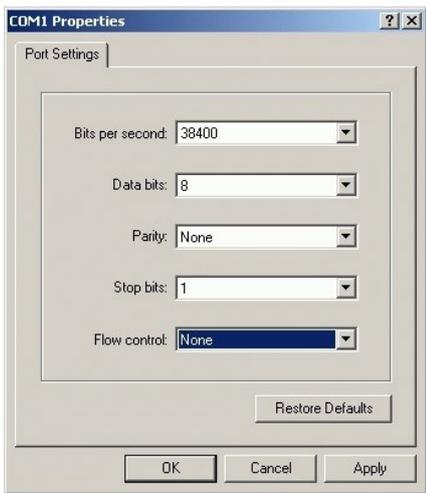Establishing Connection with MCS-2160	
1. Input a name for this connection, such as MCS-2160, and also select an icon for this connection. Click "OK" to continue.	
2. Select the COM port of PC for this connection. Click "OK" to continue.	
	<p>3. Set the COM port parameters according to the settings listed down below:</p> <ul style="list-style-type: none"> • Bits per second: 38400 • Data bits: 8 • Parity: None • Stop bits: 1 • Flow control: None <p>Click "OK" to continue.</p>
Click the "Enter" key on your keyboard to start setting MCS-2160 via HyperTerminal. To log in, please type MCS-2160's user name and password:	
<ul style="list-style-type: none"> • Default User Name: admin • Default Password: admin (Both the User Name and Password are case-sensitive.) <p>If you change MCS-2160's user name and password with MCS-2160's configuration webpage, please log in with the new user name and password here.</p>	

3.2.2. MCS-2160 HyperTerminal Commands

After logging in MCS-2160 via HyperTerminal, a **MCS-2160 Command Menu** will be displayed, showing MCS-2160's HyperTerminal commands. Please see the table down below for brief descriptions of MCS-2160 commands:

Command	Alias	Command Description
system	sys	The system command allows you to view MCS-2160's system information, make system configurations, and upgrade MCS-2160's firmware/FPGA.
ip	ip	The ip command allows you to view MCS-2160's current IP settings or configure these settings.
Cls	cls	The cls command allows you to clear HyperTerminal screen.
Logout	logout	The logout command allows you to log out. For security issues, it is recommended that you should log out if you're not using the HyperTerminal anymore.

Please see sections down below for more detailed information regarding to MCS-2160's command.



A. MCS-2160 HyperTerminal Command – system

Command Descriptions – system			
system	show	chassis	The system show chassis command allows you to view MCS-2160's Fan Tray status, PCB/firmware/FPGA versions, as well as hardware temperature and Counter of each module card.
		information	The system show information command display the S/N, MAC, PCB version and Firmware version of your MCS-2160.
		fant	Shows the detail information of your connected MCS-FANT.
	User	show	The system user show command allows you to view the current users and their passwords.
		Admin	The system user admin [name password] <name password> command allows you to change the user name and its password of the user with administrator privilege. For example, if you type in system user admin name test123 and press enter, a user named test123 with administrator privilege will be created.
		Guest	The system user guest [name password] <name password> command allows you to change the user name and its password of the user with guest privilege. For example, if you type in system user guest name test123 and press enter, a user named test123 with guest privilege will be created.
	Save	The system save command allows you to save the current settings to MCS-2160's NV-RAM. Please note that all unsaved settings will be lost after system reboot.	
	Logip	Show	This command will show your current Syslog Receiver IP.
		Set	You can set your Syslog Receiver IP by typing command: sys logip set xxx.xxx.xxx.xxx .
	safety	show	This command will show you the status of this function and the set temperature threshold.
		enable	This command will enable the safety function.
		disable	This command will disable the safety function.
		value	This command allows you to set the temperature threshold. You can set as 60, 65, 70, 75 and 80 degrees centigrades.
	Update	firmware/fant	<p>The system update [firmware/fant] [remote file] [host ip] commands allow you to upgrade MCS-2160's firmware/fant. The following descriptions are for upgrading MCS-2160's firmware. However, procedures for upgrading MCS-2160's fant are quite the same and can be related.</p> <ol style="list-style-type: none"> 1. Please download and install first the Tftpd32 software from internet. 2. Let the BIN file (firmware update file) inside a folder of your PC, and open this file by open the folder with Tftpd32. 3. Set the Server Interface of Tftpd32 as 192.168.1.17. 4. On the Hyper Terminal screen, type in "sys update [firmware/fant] [remote file] [host ip]" and click enter. Press Y to proceed and start upgrading firmware, or press N to cancel. 5. MCS-2160 will reboot when finishing upgrading the firmware.
	Reset	The system reset command allows you to reset all MCS-2160's settings back to the default values.	
Reboot	The system reboot command allows you to reboot MCS-2160. Please note that all unsaved settings will be lost after rebooting.		

*Note1: Please access the "Counter" by entering "sys show chassis". Entering "0" to access the MCS-2160, then enter the number of the slot of the module card that you want to analysis, and please confirm the commands for specific analysis.

*Note2: For updating your MCS-2160, please update first all the MGM_RTC_v1.1b002 version, and then update to the MGM_RTC_v1.1b003 or newest.



A. MCS-2160 HyperTerminal Command – system (Continue)

Command Descriptions – system			
system	snmp	show	Shows the status of snmp v1/v2/v3.
		readcommunity	Type command sys snmp readcommunity private or public to set this option as private or public.
		writecommunity	Type command sys snmp writecommunity private or public to set this option as private or public.
		securityname	Type command sys snmp securityname XXX to set the username as XXX for snmp v3.
		authpassword	Type command sys authpassword XXX to set the authpassword as XXX for snmp v3.
		privpassword	Type command sys authpassword XXX to set the privpassword as XXX for snmp v3.
	snmp v2	enable/disable	Type command sys snmp v2 enable or disable to enable or disable the snmp v2 function.
	snmp v3	enable/disable	Type command sys snmp v3 enable or disable to enable or disable the snmp v3 function.
	time	show	Type command sys time show to display the current time.
		set	Type command sys time set xx : yy : zz to set your time as hour : min : sec.
	date	show	Type command sys date show to display the current date.
		set	Type command sys date set xxxx : yy : zz to set your date as year : month : day.
	mail	show	Type command sys mail show to display your alarm mail settings.
		enable	Type command sys mail enable to enable this function.
		disable	Type command sys mail disable to disable this function.
		server	Type command sys mail server XXX to set your pop3 server address as XXX.
		account	Type command sys mail account XXX to set your e-mail box account as XXX.
		password	Type command sys mail password XXX to set your e-mail box password as XXX.
		sma	Type command sys mail sma XXX to set your sender's e-mail address as XXX.
		dma	Type command sys mail dma XXX to set your destination e-mail address as XXX.
		interval	Type command sys mail interval XX to set your e-mail sending interval as XX, with setting range 1-65535 minutes.
		content	Type command sys mail content XX to set your e-mail sending interval as XX, in which the XX includes Port link state change, DDMI, Card state change, Power supply change, temperature and Fan tray warning.

*Note1: the authpassword, privpassword and mail password are case-sensitive.

*Note2: the authpassword, privpassword and mail password must be the same as your webpage settings.

*Note3: for Time and Date settings please install battery on your XC-M667 module card.



A1. MCS-2160 HyperTerminal Command – system chassis

```
=====  
Total chassis number 02  
=====  
Chassis ID   Side Fan | Rear Fan |   Fant Tray  
              Fan1 Fan2 | Fan1 Fan2 | Fan1 Fan2 Fan3 Fan4 Fan5  
-----  
00           ON  ON  | ON  ON  | NA  NA  NA  NA  NA  
01           ON  ON  | ON  ON  | NA  NA  NA  NA  NA  
=====  
>Input chassis id for enter card management window,ESC for exit.
```

Please type **sys show chassis** command to display the status of your MCS-2160 and XC module cards, when you cascade numerous **MCS-2160**, the number of total chassis cascaded will be shown as the figure above on Total chassis number. In this example of the figure above, we cascaded 2 **MCS-2160** together which is **Chassis ID 00** and **01**, the number than is shown as **Total chassis number 02**.


Note: The system is able to cascade up to 10 MCS-2160.

For upgrading your XC module cards' firmware, please follow the steps below:

1. Type **sys show chassis** command, select the correct Chassis ID number and number order of the XC module cards.
2. Download and install the **Tftpd32** software from internet.
3. Let the BIN file (firmware update file) inside a folder of your PC, and open this file by open the folder with **Tftpd32**.
4. Set the Server Interface of **Tftpd32** as 192.168.1.17.
5. On the Hyper Terminal screen, type in "**sys update [firmware/fant] [remote file] [host ip]**" and click **enter**. Press **Y** to proceed and start upgrading firmware, or press **N** to cancel.
6. MCS-2160 will reboot when finishing upgrading the firmware.



While the system is updating your MCS-2160 or XC module cards' firmware, the Tftpd32 software will pop up a progress bar as shown below:

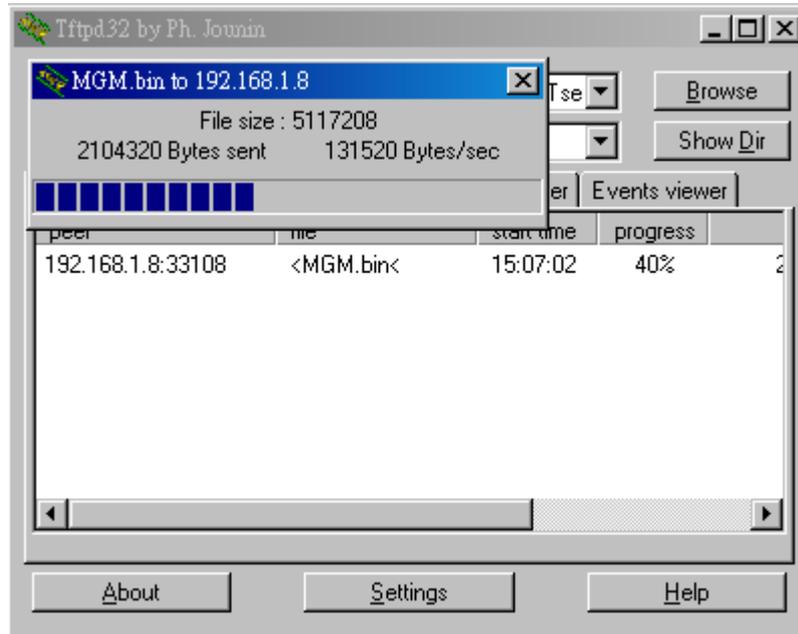

When the Tftpd32's progress bar is finished, the Hyper Terminal window will start to upgrade your MSC-2160 or XC module cards system, and meanwhile, it will show the progress of the upgrading as shown below:

```
Writing data to block 22 at offset 0x2c0000
Writing data to block 23 at offset 0x2e0000
Writing data to block 24 at offset 0x300000
Writing data to block 25 at offset 0x320000
Writing data to block 26 at offset 0x340000
Writing data to block 27 at offset 0x360000
Writing data to block 28 at offset 0x380000
Writing data to block 29 at offset 0x3a0000
Writing data to block 30 at offset 0x3c0000
Writing data to block 31 at offset 0x3e0000
Writing data to block 32 at offset 0x400000
Writing data to block 33 at offset 0x420000
Writing data to block 34 at offset 0x440000
Writing data to block 35 at offset 0x460000
Writing data to block 36 at offset 0x480000
Writing data to block 37 at offset 0x4a0000
Writing data to block 38 at offset 0x4c0000
Writing data to block 39 at offset 0x4e0000
Erasing 128 Kibyte @ 180000 -- 15 % complete.
/sbin/flash_eraseall: /dev/mtd3: MTD Erase failure: Input/output error
Erasing 128 Kibyte @ a00000 -- 100 % complete.
| 100%
Done!
```



B. MCS-2160 HyperTerminal Command – ip

Command Descriptions – ip			
ip	show status	The ip show command allows you to view information of MCS-2160's IP configuration.	
		The ip status command allows you to view information of MCS-2160's IP status.	
	mode	dhcp	The ip mode dhcp command allows you to set MCS-2160's IP acquiring mode to DHCP, allowing MCS-2160 to acquire IP automatically from DHCP server.
		static	The ip mode static command allows you to set MCS-2160's IP acquiring mode to Static, allowing you to set IP/Subnet Mask/Gateway IP manually.
	address*	The ip address <IP Address> command allows you to set MCS-2160's IP address. For example, to set MCS-2160's IP address to 192.168.1.20, please input the command " ip address 192.168.1.20 ".	
	mask*	The ip mask <Subnet Mask Address> command allows you to set MCS-2160's subnet mask address. For example, to set MCS-2160's subnet mask address to 255.255.255.0, please input the command " ip mask 255.255.255.0 ".	
gateway*	The ip gateway <Gateway Address> command allows you to set MCS-2160's gateway address. For example, to set MCS-2160's subnet gateway address to 192.168.1.254, please input the command " ip gateway 192.168.1.254 ".		

*MCS-2160's default IP address/subnet mask/default gateway are 192.168.1.8/255.255.255.0/192.168.1.1

C. MCS-2160 HyperTerminal Command – cls

Command Descriptions – cls	
cls	The cls command allows you to clear HyperTerminal screen.

D. MCS-2160 HyperTerminal Command – logout

Command Descriptions – logout	
logout	The logout command allows you to log out of MCS-2160's HyperTerminal configuration session.




3.3 Managing MCS-2160 with Telnet

3.3.1. Telnet Settings for MCS-2160

Before setting Telnet for MCS-2160, please activate this service on your PC.

Establishing Connection with MCS-2160

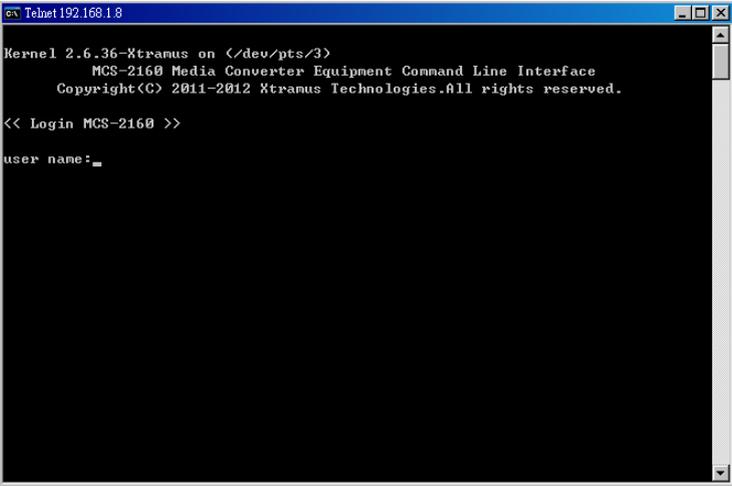

1. Please click **Start** button on your desktop, than choose: **Run...**→type **CMD**→click **OK**→type **telnet 192.168.1.8**→click **Enter**, and you will see the window on the left.
2. Type “**admin**” on the **user name** and **user password** field to access the MCS-2160 system.

***Note:** If you change MCS-2160’s user name and password with MCS-2160’s configuration webpage, please log in with the new user name and password here.

Please Note: If you log in the **Telnet** to access the MCS-2160 system, the previous accessed **Web Management** will automatically log out from the MCS-2160 system.

3.2.2. MCS-2160 Telnet Commands

After logging in MCS-2160 via Telnet, a **MCS-2160 Command Menu** will be displayed, showing MCS-2160’s Telnet commands. Please see the table down below for brief descriptions of MCS-2160 commands:

Command	Alias	Command Description
system	sys	The system command allows you to view MCS-2160’s system information, make system configurations, and upgrade MCS-2160’s firmware/FPGA.
ip	ip	The ip command allows you to view MCS-2160’s current IP settings or configure these settings.
cls	cls	The cls command allows you to clear HyperTerminal screen.
logout	logout	The logout command allows you to log out. For security issues, it is recommended that you should log out if you’re not using the HyperTerminal anymore.

Please see sections down below for more detailed information regarding to MCS-2160’s command.



A. MCS-2160 Telnet Command – system

Command Descriptions – system			
system	show	chassis	The system show allows you to view MCS-2160's Fan Tray status, PCB/firmware/FPGA versions, as well as hardware temperature and Counter of each module card.
		information	The system show information command display the S/N, MAC, PCB version and Firmware version of your MCS-2160.
		fant	Shows the detail information of your connected MCS-FANT.
	user	show	The system user show command allows you to view the current users and their passwords.
		admin	The system user admin [name password] <name password> command allows you to change the user name and its password of the user with administrator privilege. For example, if you type in system user admin name test123 and press enter, a user named test123 with administrator privilege will be created.
		guest	The system user guest [name password] <name password> command allows you to change the user name and its password of the user with guest privilege. For example, if you type in system user guest name test123 and press enter, a user named test123 with guest privilege will be created.
	save	The system save command allows you to save the current settings to MCS-2160's NV-RAM. Please note that all unsaved settings will be lost after system reboot.	
	Logip	Show	This command will show your current Syslog Receiver IP.
		Set	You can set your Syslog Receiver IP by typing command: sys logip set xxx.xxx.xxx.xxx .
	safety	show	This command will show you the status of this function and the set temperature threshold.
		enable	This command will enable the safety function.
		disable	This command will disable the safety function.
		value	This command allows you to set the temperature threshold. You can set as 60, 65, 70, 75 and 80 degrees centigrades.
	update	firmware/fant	<p>The system update [firmware/fant] [remote file] [host ip] commands allow you to upgrade MCS-2160's firmware/fant. The following descriptions are for upgrading MCS-2160's firmware. However, procedures for upgrading MCS-2160's fant are quite the same and can be related.</p> <ol style="list-style-type: none"> 1. Please download and install first the Tftpd32 software from internet. 2. Let the BIN file (firmware update file) inside a folder of your PC, and open this file by open the folder with Tftpd32. 3. Set the Server Interface of Tftpd32 as 192.168.1.17. 4. On the Hyper Terminal screen, type in "sys update [firmware/fant] [remote file] [host ip]" and click enter. Press Y to proceed and start upgrading firmware, or press N to cancel. 5. MCS-2160 will reboot when finishing upgrading the firmware.
	reset	The system reset command allows you to reset all MCS-2160's settings back to the default values.	
	reboot	The system reboot command allows you to reboot MCS-2160. Please note that all unsaved settings will be lost after rebooting.	

*Note1: Please access the "Counter" by entering "sys show chassis". Entering "0" to access the MCS-2160, then enter the number of the slot of the module card that you want to analysis, and please confirm the commands for specific analysis.

*Note2: For updating your MCS-2160, please update first all the MGM_RTC_v1.1b002 version, and then update to the MGM_RTC_v1.1b003 or newest.



A. MCS-2160 HyperTerminal Command – system (Continue)

Command Descriptions – system			
system	snmp	show	Shows the status of snmp v1/v2/v3.
		readcommunity	Type command sys snmp readcommunity private or public to set this option as private or public.
		writecommunity	Type command sys snmp writecommunity private or public to set this option as private or public.
		securityname	Type command sys snmp securityname XXX to set the username as XXX for snmp v3.
		authpassword	Type command sys authpassword XXX to set the authpassword as XXX for snmp v3.
		privpassword	Type command sys authpassword XXX to set the privpassword as XXX for snmp v3.
	snmp v2	enable/disable	Type command sys snmp v2 enable or disable to enable or disable the snmp v2 function.
	snmp v3	enable/disable	Type command sys snmp v3 enable or disable to enable or disable the snmp v3 function.
	time	show	Type command sys time show to display the current time.
		set	Type command sys time set xx : yy : zz to set your time as hour : min : sec.
	date	show	Type command sys date show to display the current date.
		set	Type command sys date set xxxx : yy : zz to set your date as year : month : day.
	mail	show	Type command sys mail show to display your alarm mail settings.
		enable	Type command sys mail enable to enable this function.
		disable	Type command sys mail disable to disable this function.
		server	Type command sys mail server XXX to set your pop3 server address as XXX.
		account	Type command sys mail account XXX to set your e-mail box account as XXX.
		password	Type command sys mail password XXX to set your e-mail box password as XXX.
		sma	Type command sys mail sma XXX to set your sender's e-mail address as XXX.
		dma	Type command sys mail dma XXX to set your destination e-mail address as XXX.
		interval	Type command sys mail interval XX to set your e-mail sending interval as XX, with setting range 1-65535 minutes.
content		Type command sys mail content XX to set your e-mail sending interval as XX, in which the XX includes Port link state change, DDMI, Card state change, Power supply change, temperature and Fan tray warning.	

*Note1: the authpassword, privpassword and mail password are case-sensitive.

*Note2: the authpassword, privpassword and mail password must be the same as your webpage settings.

*Note3: for Time and Date settings please install battery on your XC-M667 module card.



A1. MCS-2160 HyperTerminal Command – system chassis

```
=====  
Total chassis number 02  
=====  
Chassis ID | Side Fan | Rear Fan | Fant Tray |  
            | Fan1 Fan2 | Fan1 Fan2 | Fan1 Fan2 | Fan3 Fan4 Fan5 |  
-----  
00         | ON  ON  | ON  ON  | NA  NA  | NA  NA  NA  |  
01         | ON  ON  | ON  ON  | NA  NA  | NA  NA  NA  |  
=====  
>Input chassis id for enter card management window,ESC for exit.
```

When you cascade numerous **MCS-2160**, the number of total chassis cascaded will be shown as the figure above on Total chassis number. In this example of the figure above, we cascaded 2 **MCS-2160** together which is **Chassis ID 00** and **01**, the number than is shown as **Total chassis number 02**.

Note: The system is able to cascade up to 10 MCS-2160.

For upgrading your XC module cards' firmware, please follow the steps below:

1. Type **sys show chassis** command, select the correct Chassis ID number and number order of the XC module cards.
2. Download and install the **Tftpd32** software from internet.
3. Let the BIN file (firmware update file) inside a folder of your PC, and open this file by open the folder with **Tftpd32**.
4. Set the Server Interface of **Tftpd32** as 192.168.1.17.
5. On the Hyper Terminal screen, type in "**sys update [firmware/fant] [remote file] [host ip]**" and click **enter**. Press **Y** to proceed and start upgrading firmware, or press **N** to cancel.
6. MCS-2160 will reboot when finishing upgrading the firmware.



B. MCS-2160 Telnet Command – ip

Command Descriptions – ip						
ip	show status	The ip show command allows you to view information of MCS-2160's IP configuration.				
	mode	<table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">dhcp</td> <td>The ip mode dhcp command allows you to set MCS-2160's IP acquiring mode to DHCP, allowing MCS-2160 to acquire IP automatically from DHCP server.</td> </tr> <tr> <td style="text-align: center;">static</td> <td>The ip mode static command allows you to set MCS-2160's IP acquiring mode to Static, allowing you to set IP/Subnet Mask/Gateway IP manually.</td> </tr> </table>	dhcp	The ip mode dhcp command allows you to set MCS-2160's IP acquiring mode to DHCP, allowing MCS-2160 to acquire IP automatically from DHCP server.	static	The ip mode static command allows you to set MCS-2160's IP acquiring mode to Static, allowing you to set IP/Subnet Mask/Gateway IP manually.
	dhcp	The ip mode dhcp command allows you to set MCS-2160's IP acquiring mode to DHCP, allowing MCS-2160 to acquire IP automatically from DHCP server.				
	static	The ip mode static command allows you to set MCS-2160's IP acquiring mode to Static, allowing you to set IP/Subnet Mask/Gateway IP manually.				
	address*	The ip address <IP Address> command allows you to set MCS-2160's IP address. For example, to set MCS-2160's IP address to 192.168.1.20, please input the command " ip address 192.168.1.20 ".				
	mask*	The ip mask <Subnet Mask Address> command allows you to set MCS-2160's subnet mask address. For example, to set MCS-2160's subnet mask address to 255.255.255.0, please input the command " ip mask 255.255.255.0 ".				
gateway*	The ip gateway <Gateway Address> command allows you to set MCS-2160's gateway address. For example, to set MCS-2160's subnet gateway address to 192.168.1.254, please input the command " ip gateway 192.168.1.254 ".					

*MCS-2160's default IP address/subnet mask/default gateway are 192.168.1.8/255.255.255.0/192.168.1.1

C. MCS-2160 Telnet Command – cls

Command Descriptions – cls	
cls	The cls command allows you to clear Telnet screen.

D. MCS-2160 Telnet Command – logout

Command Descriptions – logout	
logout	The logout command allows you to log out of MCS-2160's Telnet configuration session.



4. MCS-2160 General Specifications

Model	MCS-2160
Slot	16 Slots for Installing XC Series Module Cards
Dimension	441 mm x 310 mm x 88 mm
Temperature	> Operating: 0°C ~ 40°C (32°F ~ 104°F) > Storage: 0°C ~ 50°C (32°F ~ 122°F)
Humidity (non-condensing)	> Operating: 0% ~ 85% RH > Storage: 0% ~ 85% RH
Built-in Sensors	Detecting system temperatures, rotation speed of fans, and system voltage